

MEMORY HICORDER MR8740T





Perfect for multi-point measurements on high-performance boards

108 Channels of Simultaneous Testing

••• Delivering triple-digit multichannel measurement


Analog 108ch

Analog + Logic 144ch

 $\underset{\text{Max.}}{\text{Signal generation}} \, 216ch$






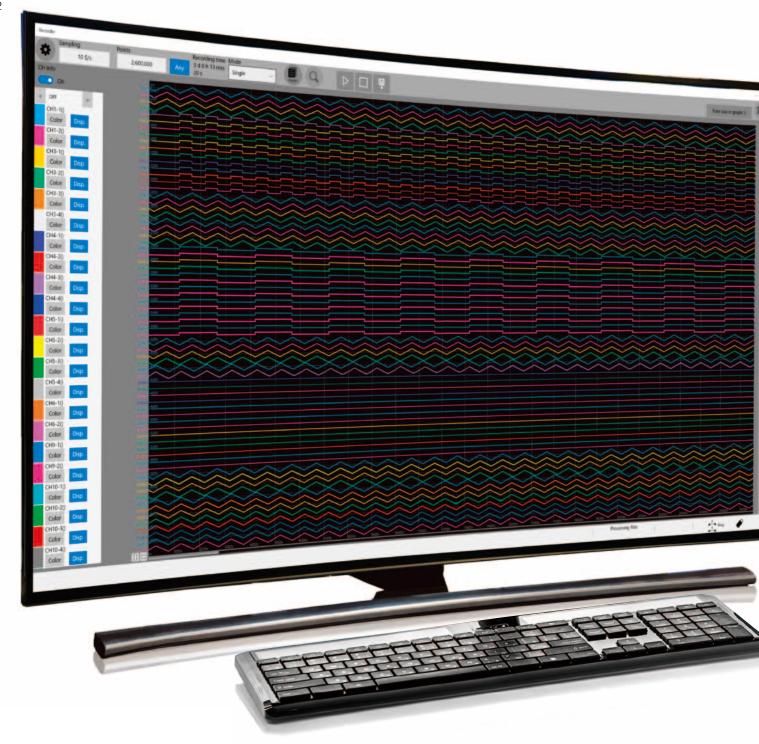

Compact, measures up to 108 channels

Multi-channel, reduced footprint

The MR8740T achieves testing of up to 108 channels, double that of conventional models, while maintaining the same unit size. Test high-performance ECU boards, with their ever-increasing number of test points, with a single measurement system. Make the most of your limited space for testing systems.

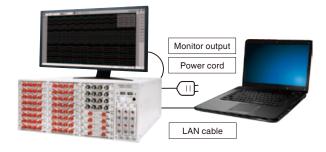

Isolated design for fault prevention

All channels isolated


Isolation of all channels prevents noise from connected devices, with no negative effect due to different ground potential. Eliminate faults and other trouble caused by mistaken wirings and over-voltages / over-currents due to shorted boards.



Between input channels

Between main unit and input channel

* Only the 8971 and 8973 units are

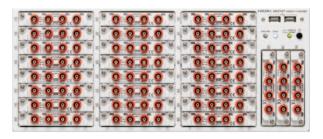

MEMORY HICORDER MR8740T

Analog Max. 108ch Test data transfer time

As artificial intelligence advances in automobiles and other advanced industries the need for technology to simultaneously process large volumes of data, as well as safety and security, has arrived. The MR8740T supports your testing needs with simultaneously sampled measurements across multiple channels.







Simultaneous sampling on all channels




*1: When using 8966 *2: When using MR8990, U8991

Transfer time for test data reduced to almost zero

Minimize dead time while testing

Previously, calculations and saving/transferring data after measurements were slow processes, and much of the testing time was taken up by dead time while waiting to perform the next test. The MR8740T dramatically reduces the time both for calculations and saving data, almost completely eliminating dead time while performing tests.

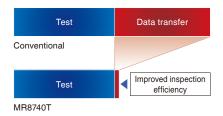

Save recorded data 100 times faster

Minimize the time required to save on devices and media

The MR8740T features a brand new interface and faster internal processing, reducing the time required to save measurement data to media. For example, saving that required 10 minutes previously can now be completed in as little as 6 seconds. This saves you the trouble of waiting for data to be saved and improves work efficiency.

Legacy	USB 2.0	1/20 of conven-
MR8740T	USB 3.0	tional models 1/30 of conventional models
	Internal	1/100 of conventional models

Save data in real time NEW




Save data while measurement is ongoing

The MR8740T saves data in real-time to recording media while measurement is ongoing thanks to a combination of high-speed data transfer performance and high-speed data saving performance. For example, if saving data to the internal SSD, the instrument can save 64 channels of data in real time at a sampling rate of 1 MS/s.



Applications

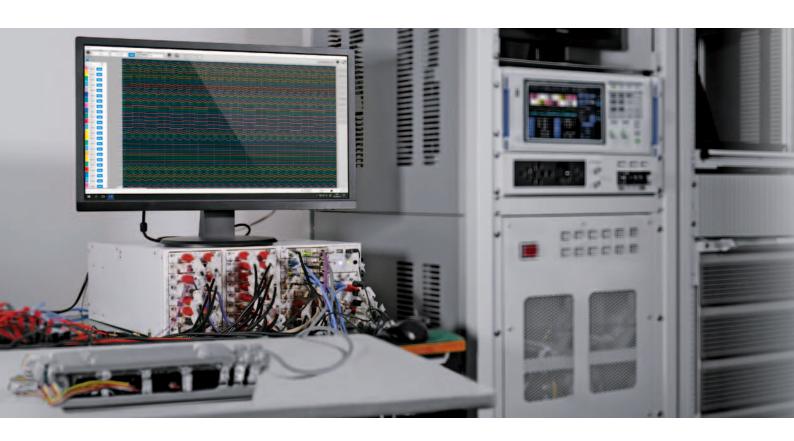

Control simulation

Generating and measuring signals with a single device eliminates the need to prepare separate measurement and generator devices.

Simulated output of various sensor signals and control pulse signals allows you to simulate the test waveforms (DC output, sine wave output) of engine controls for automobiles, high speed trains, and airplanes, and control boards for airbags, brake systems, power steering, and active suspension.







Airbag control test

Brake system control test

Engine control test


Tests using distortion measurements

Input the analog signal from a strain gauge or extensometer and the analog signal from a stress sensor.

Use the scaling function to convert those values to tensile strain, and to convert the stress sensor value to tensile stress.

Measure analog and logic at the same time, to simultaneously record a variety of signals with a single test.



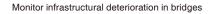



Measure stress in moving parts of industrial robots



Multi-point measurement of propellers on wind power generators, etc.

ECU Testing

ECUs are connected to a large number and wide variety of sensors. Add a signal generation unit to simulate these sensors. By measuring the simulation results with a measurement unit at the same time, you can perform all steps from signal generation to measurement with a single MR8740T.

The U8794 also offers resistance output to enable thermistor circuit testing.




Replace multiple DMMs with a single unit


Replace multiple desktop DMM units with a single MEMORY HiCORDER for measuring multi-channel sensors. Select from the MR8990 2-channel unit with a wide range, or the U8991 4-channel unit to measure multiple channels. In addition to reducing the number of units required, system simplification makes maintenance and management easier.

Expandable to a maximum of 108 channels using multiple 4-channel

108 Benchtop DMMs

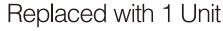



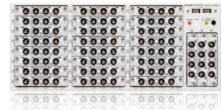

Comparison of DIGITAL VOLTMETER UNIT MR8990 and U8991

External appearance	HICKS SECTION OF THE PARTY OF T	TO THORID OF THE STATE OF THE S		
Model No.	MR8990	U8991		
Measurement functions	No. of channels: 2, for DC voltage measurement	No. of channels: 4, for DC voltage measurement		
Input terminals	Banana input terminal Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)	isolated from the unit, the maximum voltage that can		
Measurement range	100, 1000 mV f.s. 10, 100, 1000 V f.s., 5 ranges	1, 10, 100 V f.s., 3 ranges		
Measurement resolution				
Integration time	20 ms × NPLC (during 50 Hz),	16.67 ms × NPLC (during 60 Hz)		
Basic measurement accuracy	±0.01% rdg. ±0.0025% f.s. (at range of 1000 mV f.s.)	±0.02% rdg. ±0.0025% f.s.		
Maximum input voltage	500 V DC (the maximum voltage that can be applied across input pins without damage)	100 V DC (the maximum voltage that can be applied across input pins without damage)		


Specifications for DC voltage measurements

Measure minute fluctuations in sensor output for automobiles or voltage fluctuations in batteries with high precision and at high resolution. The maximum voltage input is 500 V DC for the MR8990 and 100 V DC for the U8991. Both units also feature high input resistance.

Real-time Save

Save data while measurement is ongoing, even with extended recording, high-speed sampling, and numerous channels

The MR8740T offers real-time save functionality that saves data to recording media while measurement is ongoing. Hioki recommends using the instrument's large internal SSD unit when you need to record data for extended periods of time. If you wish to save data after measurement has completed, you can specify a USB drive as the save destination. Additionally, you can use the real-time save function to control how long the instrument can continue measuring without being dependent on the amount of built-in storage memory. Files are saved as 512 MB segments when using the real-time save function.

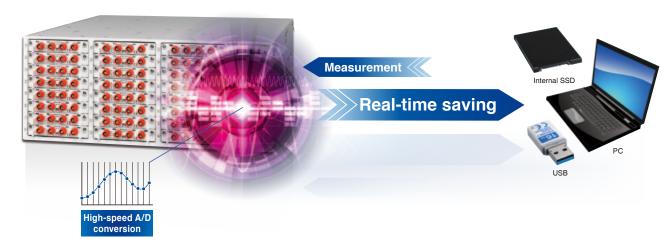

Real-time save capabilities when measuring 108 channels

Save destination	Number of channels	Sampling speed	Supported measurement time	Maximum sampling speed at which real-time saving is supported*1
Internal SSD (480 GB)	108 ch	500 kS/s	About 1 hr.	5 MS/s (12 channels)
USB Drive Z4006 (16 GB)	108 ch	100 kS/s	About 10 min.	1 MS/S (12 channels)*2
PC	108 ch	20 kS/s	Depends on PC capacity	200 kS/s (12 ch)

^{*1:} For 2 channels (no settings for channel 1) *2 When connected via a USB 3.0 connector only.

Maximum sampling speeds at which real-time saving is supported

Save destination	Number of channels used					
Save desimation	Up to 12	12 to 32	33 to 64	65 or more		
Internal SSD	5 MS/s	2 MS/s	1 MS/s	500 kS/s		
USB Drive Z4006	1 MS/s *2	500 kS/s *2	200 kS/s *2	100 kS/s *2		
PC	200 kS/s	100 kS/s	50 kS/s	20 kS/s		

^{*1:} Double channel counts if U8991 is installed. *2: When connected via a USB 3.0 connector only.


Amount of time for which data can be saved in real time to internal SSD (reference values)

d: Days h: Hours min: Minutes s: Seconds

Compling and ad	Number of channels used							
Sampling speed	Up to 12	13 to 32	33 to 64	65 or more				
5 MS/s	50 min	-	-	-				
2 MS/s	2 h 05 min	1 h 02 min 30 s	-	-				
1 MS/s	4 h 10 min	2 h 05 min	1 h 02 min 30 s	-				
500 kS/s	8 h 20 min	4 h 10 min	2 h 05 min	1 h 02 min 30 s				
200 kS/s	20 h 50 min	10 h 25 min	5 h 12 min 30 s	2 h 36 min 15 s				
100 kS/s	1 d 17 h 40 min	20 h 50 min	10 h 25 min	5 h 12 min 30 s				
50 kS/s	3 d 11 h 20 min	1 d 17 h 40 min	20 h 50 min	10 h 25 min				
20 kS/s	8 d 16 h 20 min	4 d 08 h 10 min	2 d 04 h 05 min	1 d 2 h 02 min 30 s				
10 kS/s	17 d 08 h 40 min	8 d 16 h 20 min	4 d 08 h 10 min	2 d 04 h 05 min				
5 kS/s	34 d 17 h 20 min	17 d 08 h 40 min	8 d 16 h 20 min	4 d 08 h 10 min				
2 kS/s	86 d 19 h 20 min	43 d 09 h 40 min	21 d 16 h 50 min	10 d 20 h 25 min				
1 kS/s	173 d 14 h 40 min	86 d 19 h 20 min	43 d 09 h 40 min	21 d 16 h 50 min				
500 S/s	347 d 05 h 20 min	173 d 14 h 40 min	86 d 19 h 20 min	43 d 09 h 40 min				
200 S/s	`	ì	217 d 00 h 20 min	108 d 12 h 10 min				
100 S/s			ł	217 d 00 h 20 min				

Saving data directly to your PC


Transfer measurement data directly to your PC by using the FTP sending function together with the real-time save function. This makes it easier to observe data after the measuring process.

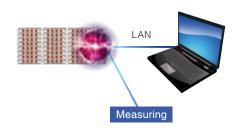

Long-term measurements for more efficient testing

The real-time save function boasts high-speed sampling and multi-channel measurements.

Perform an approximately 1-hour measurement at 5 MS/s in 2 channels or 1 MS/s in 64 channels.

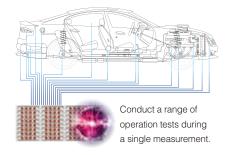

Complete Product Lineup



Install up to 27 modules

Build Your Ideal Inspection System

Choose from a diverse array of modules to build your perfect test system.

To test a ECU that requires multi-point, high-precision measurements, combine the U8975 and U8991 4-channel units to build a measurement system that delivers a maximum of 108 channels. In addition, create an integrated testing system that can simulate engine behaviors and sensors by utilizing the waveform generators, pulse generators, and VIR generators available on select units.

Use ANALOG UNIT 8966 and DIGITAL VOLTMETER UNIT MR8990 to supplement waveforms of high-speed and high-voltage signals, such as for inverter boards, in the same way as when measuring with a DMM. Combine high-precision units that perform simultaneous sampling for safe and reliable operation in a variety of measurement scenarios.

Unit interchangeability

Use any of the 18 types listed in the unit selection guide below.

The MR8740T is compatible with the same units used for the HIOKI MEMORY HICORDER MR8740, MR8741, MR6000, MR8827, and MR8847A.

Unit selection guide (18 types available)

	Measured signal	Model No.	Description	No. of channels	Fastest sampling	Bandwidth	A/D resolution	DC accuracy	Max. input voltage	Min. resolution (*1)	Max. sensitivity range	Isolated/ Non- isolated	Notes
	Voltage	8966	ANALOG UNIT	2 ch	20 MS/s	DC to 5 MHz	12 bits	±0.5% f.s.	400 V DC	0.05 mV	100 mV f.s.	Yes	n/a
	Voltage (multi-channel)	U8975	4ch ANALOG UNIT	4 ch	5 MS/s	DC to 2 MHz	16 bits	±0.1% f.s.	200 V DC	0.125 mV	4 V f.s.	Yes	n/a
NEW	Voltage (multi-channel, high resolution)	U8978	4CH ANALOG UNIT	4 ch	5 MS/s	DC to 2 MHz	16 bits	±0.3% f.s.	40 V DC	3.125 uV	100 mV f.s.	Yes	n/a
	Voltage (high resolution)	8968	HIGH RESOLUTION UNIT	2 ch	1 MS/s	DC to 100 kHz	16 bits	±0.3% f.s.	400 V DC	3.125 uV	100 mV f.s.	Yes	with AAF
	Voltage (DC, RMS)	8972	DC/RMS UNIT	2 ch	1 MS/s	DC to 400 kHz	12 bits	±0.5% f.s.	400 V DC	0.05 mV	100 mV f.s.	Yes	with RMS
	Voltage (high voltage)	U8974	HIGH VOLTAGE UNIT	2 ch	1 MS/s	DC to 100 kHz	16 bits	±0.25% f.s.	1000 V DC 700 V AC	0.125 mV	4 V f.s.	Yes	Maximum rated voltage to ground 600 V AC/DC CAT IV
	Voltage (high resolution)	MR8990	DIGITAL VOLTMETER UNIT	2 ch	2 ms	n/a	24 bits	±0.01% rdg. ±0.0025% f.s.	500 V DC	0.1 uV	100 mV f.s.	Yes	Maximum rated voltage to ground 300 V AC/DC CAT II
	Voltage (high resolution)	U8991	DIGITAL VOLTMETER UNIT	4 ch	20 ms	n/a	24 bits	±0.02% rdg. ±0.0025% f.s.	100 V DC	1 uV	1 V f.s.	Yes	Maximum rated voltage to ground 100 V AC/DC
	Current	8971	CURRENT UNIT	2 ch	1 MS/s	DC to 100 kHz	12 bits	±0.65% f.s.	Current sensor only		on current nsor	No	with RMS Max. 4 units
NEW	Current	U8977	3CH CURRENT UNIT	3 ch	5 MS/s	DC to 2 MHz	16 bits	±0.3% f.s.	Current sensor only		on current nsor	No	Max. 3 units
	Temperature	8967	TEMPERATURE UNIT	2 ch	1.2 ms	DC	16 bits	Detailed reference	Thermocouples only	0.01°C	200°C (392°F) f.s.	Yes	n/a
	Strain	U8969	STRAIN UNIT	2 ch	200 kS/s	DC to 20 kHz	16 bits	±0.5% f.s. ±4 με	Strain only	0.016 με	400 μ ε f.s.	Yes	n/a
	Frequency	8970	FREQ UNIT	2 ch	200 kS/s	DC to 100 kHz (*3)	16 bits	n/a	400 V DC	0.002 Hz	Depends on mode	Yes	n/a
NEW	Acceleration	U8979	Charge Unit	2 ch	200 kS/s	DC to 50 kHz (DC) 1 Hz to 50 kHz (AC)	16 bits	±0.5% f.s. (Voltage) ±2.0% f.s. (Acceleration)	40 V DC		nds on ion sensor	Yes	Supports TEDS
	Logic	8973	LOGIC UNIT	4 probes	n/a	n/a	n/a	n/a	n/a	n/a	n/a	No	9320-01,9327, Requires 9320-01, 9327 or MR9321-01

(*1) Minimum resolution shows the highest sensitivity resolution. (*2) When using the 9665 (*3) Minimum pulse width 2 µs

Target	Model No.	Description	Channels	Output	Frequency	Output range
Voltage	MR8791	PULSE GENERATOR UNIT	8 ch	Pulse, pattern	0.1 Hz to 20 kHz (pulse) 10 Hz to 120 kHz (pattern clock)	Logic output (Amplitude: 0 to 5 V), Open collector output
Voltage	MR8790	WAVEFORM GENERATOR UNIT	4 ch	DC, sine wave	DC, 1 Hz to 20 kHz	Output: -10 V to 10 V (Amplitude setting range: 0 to 20 Vpp)
Voltage / Current / Resistance	U8794	VIR GENERATOR UNIT	8 ch	DC voltage, DC current, resistance (simulated output)	n/a	Voltage: -0.1 V to 5.3 V, Current: ± 5 mA, Resistance: 10 Ω to 1 M Ω

Unit Advantages

Ideal for simulation testing that involves signal generation and measurement







U8794 for generating voltage, current, and resistance

MR8790 for generating waveform signals


MR8791 for generating pulse signals

Generate voltage/current signals, pulses and simulated resistance

Use generator units in place of the sensor output for simulation testing or board testing lines using generated signals. Combine a generator unit and measurement unit to perform generation and measurement with a single test system.


VIR GENERATOR UNIT U8794

Output DC voltage, DC current, and resistance.

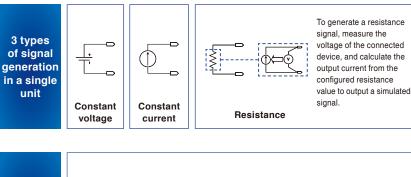



Electronic circuitry built with compact resistors

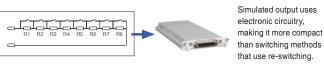

Traditional switching resistors are large and take up space.

8 channels with 1 unit

Easily configure output settings and monitor measured values

You can easily set the constant voltage, constant current, or resistance value to output for each channel. Internal voltage, current, and resistance values can be displayed on the same screen.

Ideal for testing that requires simulated signals

When used as an ECU testing device, generate simulated signals from various sensors, which is indispensable for testing electronic parts and maintaining equipment.

Generator units can simulate a variety of sensor signals

ECU type	Sensor function	Sensor type	Generator unit
	Air flow sensor	Voltage	U8794
	Throttle sensor	Voltage	U8794
	O2 sensor	Voltage	U8794
Engine	Knock sensor	Voltage	MR8790
management	Crank angle sensor	Voltage	MR8791
system	Camshaft sensor	Voltage	MR8791
	Water temperature sensor	Resistance	U8794
	Intake air temperature sensor	Resistance	U8794
Driving management system	Torque sensor G sensor Steering angle sensor Speed sensor	Voltage	MR8790 MR8791 U8794
Safety & comfort management system	Ultrasonic/radar sensor Vibration sensor Refrigerant pressure sensor Humidity sensor	Voltage Resistance	MR8790 MR8791 U8794



Testing electronic parts

Use the recorder's internal voltage monitor and current monitor to test electronic parts. Or, check resistance values and diode direction characteristics based on the output current and measured voltage.

Testing and maintaining equipment

Easily maintain and test equipment involved in voltage and current measurements thanks to high accuracy output.

Simultaneous sampling on all channels across all units




Measure up to 200 V U8975 Measure at 24-bit resolution U8991

Measure with high sensitivity at 100 mV f.s.: U8978

Ideal for measurements that require simultaneity

All channels are equipped with an A/D converter and measurement timings are synchronized, eliminating sampling time difference between units and channels. This delivers accurate time measurement for cursor readout and time difference measurements.

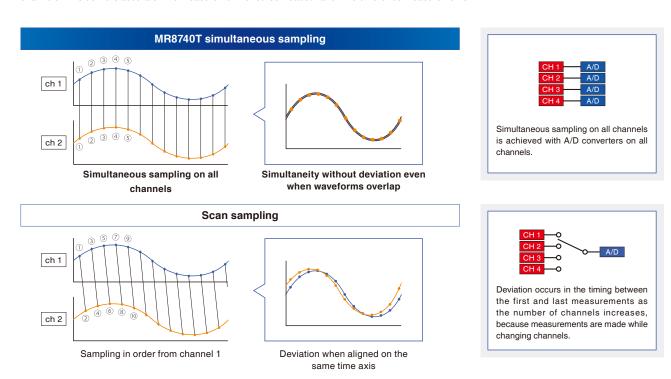


Record briefly at high speed, record for a long time at low speed

Use high-speed sampling to capture inverter waveforms, and low-speed sampling to measure RMS values on multiple channels.

Maximum recording time to internal memory

	When using a	When using a	4-channel unit
	2-channel unit	When using U8975, U8978	When using U8991
Sampling rate	Recording length: 10 M points	Recording length: 5 M points	Recording length: 2 M points
20 MS/s	0.5 s	0.25 s	0.1
10 MS/s	1 s	0.5 s	0.2
5 MS/s	2 s	1 s	0.4
2 MS/s	5 s	2 s	1
1 MS/s	10 s	5 s	2
500 kS/s	20 s	10 s	4
200 kS/s	50 s	25 s	10
100 kS/s	1 m 40 s	50 s	20
50 kS/s	3 m 20 s	1 m 40 s	40
20 kS/s	8 m 20 s	4 m 10 s	1 m 40
10 kS/s	16 m 40 s	8 m 20 s	3 m 20
5 kS/s	33 m 20 s	16 m 40 s	6 m 40
2 kS/s	1 h 23 m 20 s	41 m 40 s	16 m 40
1 kS/s	2 h 46 m 40 s	1 h 23 m 20 s	33 m 20
500 S/s	5 h 33 m 20 s	2 h 46 m 40 s	1 h 6 m 40
200 S/s	13 h 53 m 20 s	6 h 56 m 40 s	2 h 46 m 40
100 S/s	1 d 3 h 46 m 40 s	13 h 53 m 20 s	5 h 33 m 20
50 S/s	2 d 7 h 33 m 20 s	1 d 3 h 46 m 40 s	11 h 6 m 40
20 S/s	5 d 18 h 53 m 20 s	2 d 21 h 26 m 40 s	1 d 3 h 46 m 40
10 S/s	11 d 13 h 46 m 40 s	5 d 18 h 53 m 20 s	2 d 7 h 33 m 20
5 S/s	23 d 3 h 33 m 20 s	11 d 13 h 46 m 40 s	4 d 15 h 6 m 40
2 S/s	57 d 20 h 53 m 20 s	28 d 22 h 26 m 40 s	11 d 13 h 46 m 40
1 S/s	115 d 17 h 46 m 40 s	57 d 20 h 53 m 20 s	23 d 3 h 33 m 20

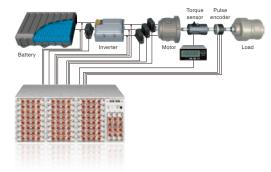

Instantaneous measurement of various inverter waveforms

Simultaneously measure and record multiple phenomena, such as the voltage, current, torque, and rotation signal on the primary and secondary sides of an inverter, from high voltage to minute voltage.


Highly accurate measurement of RMS values over long periods of time

Use the high-resolution CURRENT UNIT 8971 for highly accurate measurements of RMS values over long periods of time.

Measurement and Analysis Functions

Triggers that detect targeted events

Set triggers on any channel to record data whenever an event occurs. This setting can be configured for all channels.

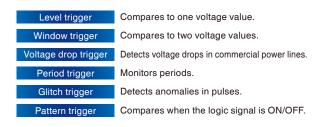


Setting multiple triggers for a single channel


Set up to 4 triggers for a single channel.

Sometimes the cause of issues are unclear, preventing you from setting up the proper trigger to capture the necessary waveforms and conduct further analysis. By being able to set glitch, level, windowin, and window-out triggers for the same input waveform, for instance, you can broaden the scope of your investigation and increase your chances of catching the signal anomalies.



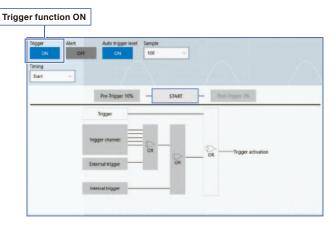

Setting Screen with Easy-to-Understand Trigger System Chart

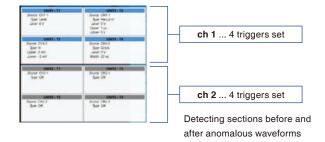

Warning function using trigger settings

Trigger settings are used to issue a warning if the setting range is exceeded.

For example, during an immunity test, this function can be used to notify the user when the variable limit value of the measured voltage is exceeded. In such cases, a window out trigger is used.


Output warning

- (1) When a waveform exceeds the upper and/or lower limits of the setting range, an event mark is displayed on the screen and an alarm sounds. When the waveform is once again within the upper and/or lower limits of the setting range, the alarm stops and an event mark is displayed on the screen.
- (2) In each case, the time, channel, type of trigger, and voltage measurement value are displayed on the top right side of the screen. * Effective for sampling at 100 KS/s or less.


When unsure about trigger level

Setting trigger level automatically

Take a preliminary measurement of a specified number of samples before the actual measurement, and use the average of those values to set the trigger level. This function is useful both for the warning function and for normal triggers.

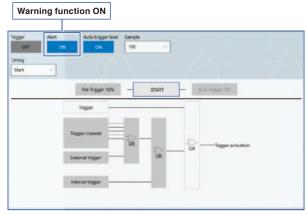

Warning function settings are the same as for triggers, and easy to use.

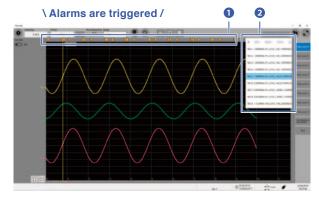


Warning displayed at the top of the screen when the alarm sounds

Calculation function with high analytical performance

Waveform processing

In addition to calculating numerical values such as average values and RMS values, up to 16 types of simultaneous processing are available by combining calculations in the waveform dimension with differential arithmetic, including the four arithmetic operations, between channels.

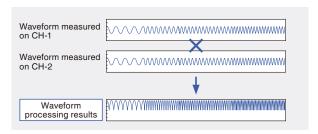

Simultaneously make up to 16 waveform calculations by combining the four arithmetic operations and 11 types of calculations

Four arithmetic operations (addition, subtraction, multiplication, and division)	Parallel displacement along time axis (SLI)
Absolute value (ABS)	Differentiation (primary (DIF), secondary (DIF2))
Exponentiation (EXP)	Integration (primary (INT), secondary (INT2))
Common logarithm (LOG)	Trigonometric functions (SIN, COS, TAN)
Square root (SQR), cube root (CBR)	Reverse trigonometric functions (ASIN, ACOS, ATAN, ATAN2)
Moving average (MOV)	MR8990 DIGITAL VOLTMETER UNIT time shift for PLC delay (PLCS)

Numerical calculations

The measured waveforms are analyzed with numerical parameters.

The MR8740T features several new numerical calculations including overshoot and undershoot calculations.

In addition to analog and logic channels, the recorder performs calculations on waveform processing results. It also features a numerical judgment function.

Simultaneous numerical calculations of up to 16 out of a total of 33 computations

Average value	Duty ratio
RMS value	Pulse count
Peak to peak value	Four arithmetic operations
Maximum value	Time difference
Time to maximum value	Phase difference
Minimum value	High-level
Time to minimum value	Low-level
Period	Median value
Frequency	Amplitude
Rise time	Overshoot
Fall time	Undershoot
Standard deviation	+Width
Area value	-Width
X-Y area value	Burst width
Specified level time	Integration values
Specified time level	XY waveform angle
Pulse width	
	•

Find a specific waveform within large amounts of measurement data

Set the peak values or trigger conditions you want to search for to have the relevant data retrieved and displayed automatically.


Our new Memory HiCorder HiConcierge function automatically calculates the characteristics of the reference waveform you have set and searches all of the measured data to detect any waveforms with low similarity as anomalous waveforms.

This drastically reduces the amount of time required to search for anomalies by eliminating the need to scroll through measured waveforms and checking them visually.

Auto search of anomalous waveforms with Concierge

Memory HiCorder Concierge

A new waveform search function that finds anomalous waveforms in all of the measured data. This function is ideal for situations where it is difficult to set the right triggers before measuring because the nature of potential anomalies cannot be predicted.

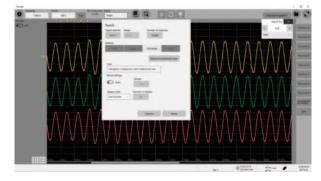

 ${\bf Memory\ HiCorder\ Concierge\ Waveform\ Search\ Screen}$



Rich set of search methods

Peak search

Search for the maximum value, minimum value, local maxima, or local minima in all of the measured data, and mark the search point in the waveform.

Trigger search

Set trigger conditions for all of the measured data again to search for points where the conditions are fulfilled, even if no triggers were set during the measuring process.

Jump

Jump to an event mark you made while measuring, to the cursor position on the display, or to the location measured at a specified time.

Smart Links with Monitors and PCs






Easily check measured waveforms and the settings of communication commands


When building a testing system, use a monitor to easily evaluate captured waveforms in full detail and review the settings for the communication commands sent from a PC. After the system is built, detach the monitor to maximize the use of resources in other applications, while continuing to control the MR8740T with only the PC. Or, if control is not necessary, use only the MR8740T with a monitor to take measurements and observe waveforms in standalone mode.

* A display with a resolution of 1920 x 1080 or better is recommended.

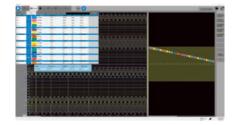


Display system for efficient work

Configure various settings while viewing a variety of information on a single screen. Improve work efficiency by reducing the need to switch or scroll through screens in order to check the settings for each channel.

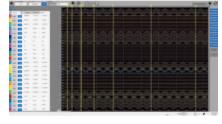

Waveform analysis with 8 cursors

When building a system or analyzing faulty parts, perform a detailed check of waveforms in order to verify proper operation. Use multiple cursors on the MR8740T to smoothly analyze and evaluate actual waveforms.

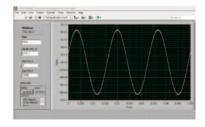

LabView compatibility

NEW

The MR8740T can be controlled with LabVIEW. Search for "MR8740-50" under "Download Software" in the "Support" section of Hioki's website and download the LabVIEW driver



Control the MR8740T with a single computer

Connect the MR8740T to a computer via LAN in order to control it with communication commands. This allows you to configure, generate, measure, and acquire data with only a single computer. After the testing system is built, remove the monitor for a more compact system.



Standard recorder when control via PC is not required

If the unit will be used only as a basic recorder and there is no need to use a computer for control, use only the MR8740T together with a monitor to take and record measurements. Display the channel waveforms that are measured with the MR8740T on the monitor in order to quickly analyze and calculate results.

High-speed communication function

A 1000 BASE-TX LAN terminal is equipped as standard.


FTP server function


The content of the MR8740T's memory (USB memory and internal SSD) can be copied to the computer.

FTP transfer function

Measurement data can be transferred directly to the computer.

Interface

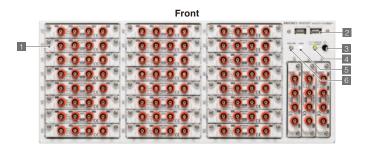

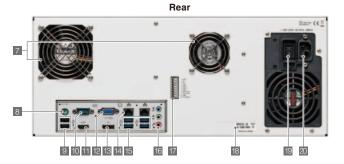

LEDs indicate unit status

The POWER STANDBY lamp and DIAG lamp indicate the basic status. The CMD ERR lamp lights when an error or warning occurs.

LED name	Color/ flashing	Meaning when on	How to turn off
	Orange	Power standby	Main power switch OFF
POWER STANDBY	Green	Power ON	Activate switch OFF *
STAINDET	Green/ flashing	Power ON (warming up)	Activate switch OFF *
DIAG	See below		-
CMD ERR	Red	Syntax error in command received, or warning occurred	*Goes off with CLS

* If the POWER STANDBY lamp is steady or flashing green, do not turn the main power switch OFF.

DIAG LED Mode Table

Display order of priority	Color/ flashing	Status	Supplement
1	Red	Ambient temperature too high (environmental temperature > 35°C/95°F)	
2	Purple	Ambient temperature too low (environmental temperature < 10°C/50°F)	
3	O Yellow	CPU load factor 80% or more	The average load factor is updated every 0.5 seconds.
	Blue	The instrument is in the trigger standby state.	
4	Green	Recording in progress	
	Pink	Recording finished	New command received, switches to normal display.
5	O White	Normal operation in progress (stopped)	

Internal battery

The MR8740T is equipped with a battery (sealed lead acid battery) for shutting down the Windows operating system when the power supply is cut off. This allows the unit to be shut down normally even when there is an unexpected power failure or a breaker trips.

Using the battery to shut down normally if there is a power failure



- Breaker OFF - Power outage

25°C/77°F (when the power is turned off 5 times/year)

(for 150 ms or longer) - Power cord disconnected



* If the main power switch is switched off while the recorder is in operation, the internal battery will not turn on, preventing the recorder from shutting down normally. Before turning the main power off, be sure to first put the recorder in standby



* The internal battery should be replaced regularly, according to the estimated service life indicated in the table above. If the service life is exceeded and a power outage occurs, Windows might not shut down normally, and if so Windows might not start up again normally. Therefore, it is important to replace the battery on a regular basis. At the recommend replacement time, please contact your authorized Hioki distributor or reseller for a replacement battery.

Space for units

Max. 27 units can be installed Model 8973 can only be installed in slots 25 to 27

2 USB 2.0 connector x2

3 Activate button

ctivates the unit, or places it in standby

4 POWER lamp Indicates the unit is activated or in standby

5 DIAG light

6 Command error lamp

7 Air vents

For reducing the internal temperature

8 PS2 connector

Not operational with this system

9 USB 2.0 connector x2

For connecting a USB memory stick, USB mouse, or USB keyboard

10 COM terminal

Not operational with this system

11 HDMI terminal

For connecting to monitors using an HDMI cable Max. resolution: 3840 x 1260

12 VGA terminal

For connecting to monitors using an RGB cable Max. resolution: 2560 x 1600

13 Display Port terminal

For connecting to monitors using a Display Port cable Max. resolution: 4096 x 2160

14 1000 BASE-T connector

For connecting to the network via a LAN cable

15 USB 3.0 connector x4

For connecting a USB memory stick, USB mouse, or USB keyboard

16 Audio terminals

Not operational with this systen

17 External control terminals

For inputting various external signals to control the device

18 Model No., Serial No.

Numbers for identifying the unit

19 Main power switch

For turning the power ON or OFF

* Place the unit in standby before turning the power OFF

20 Power inlet

onnect the included power cord

External control terminals


Connect an external device to the external control terminal in order to use that external device to start and stop the measurements made by the unit.


NI-	Tamainal name	Oneseties
No.	Terminal name	Operation
1	GND	-
2	IN1	Start/stop measurements, save,
3	IN2	forced termination, event input
4	GND	-
5	OUT1	Judgment output, occurrence of errors,
6	OUT2	busy, trigger standby
7	GND	-
- 8	EXT.TRIG	Inputs signal as an external trigger source
9	TRIG.OUT	Outputs a signal when triggering occurs
10	GND	-
11	EXT.SMPL	Inputs external sampling signals

Analysis software

Wave Viewer Wv (Bundled software) Download free updates from the HIOKI website.

The MR8740T ships standard with Wave Viewer Wv, an application for displaying and converting waveforms. The application allows you to review waveforms stored in binary data captured with the MR8740T on a PC and convert files to CSV format so that they can be loaded by Excel.

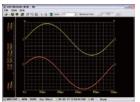

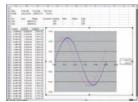

Sample Wy Screen

Sample Excel Screen

• Wave Viewer (Wv) Brief Specifications

Operating environment	Windows 10 / 8 / 7 (32 / 64-bit)
Functions	Simple display of waveform files Convert binary data files to text format, CSV, etc. Scroll function, enlarge/reduce display, jump to cursor/trigger position, etc.

WAVE PROCESSOR 9335 (Software sold separately)

Waveform display, calculation, and printing functionality

• 9335 Brief Specifications

Operating environment	Windows 10 / 8 / 7 (32 / 64-bit)	
Functions	 - Display functions: Waveform display, X-Y display, Cursor f-File loading: Readable data formats (MEM, .REC, .RMS, able file size: Maximum file size that can be saved by a gip be limited depending on the computer configuration) - Data conversion: Conversion to CSV format, Batch conversion. 	POW) / Maximum load- ven device (file size may
Printing	- Print function: Printing image file output (expanded META - Print formatting: 1 up, 2-to-16 up, 2-to-16 rows, X-Y 1-to-4	

Product Specifications

Recording method	ns (Accura Memory Record	ccy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year) er
noonang memod	-	NIT 8966 installed: Up to 54 analog channels
No. of Channels	With LOGIC UNIT 8973 inserted: Up to 48 analog channels + 48 logic channels With ANALOG UNIT U8975 / U8978 / U8991 installed: Up to 108 analog channels With LOGIC UNIT 8973 inserted: Up to 96 analog channels + 48 logic channels * Logic units are limited to slots 25 to 27 only.	
Maximum sampling		nited to slots 25 to 27 only. ALOG UNIT 8966, all channels at the same time)
rate	External samplin	
Memory capacity	1 G words Increase the reco	rding length per channel by limiting the number of modules in use.
	27 modules: Usin	g all modules; 16 modules: using modules 1 through 16; 8
	_	nodules 1 through 8; 4 modules: using modules 1 through 4
Modules	16 modi	
	*Measurement w	ill be disabled for modules other than those shown above.
Operating environment	Indoors, Pollution	n Degree 2, altitude up to 2000 m (6562.20 ft)
Operating temperature	0°C to 40°C (32°	F to 104°F), less than 80% RH (no condensation)
and humidity range Storage temperature	1000 +- 5000 (4	405 - 4000 000 000 000 000 000 000 000 000
and humidity range	Safety: EN 61010	4°F to 122°F), 80% RH or less (no condensation)
Compliance standards	EMC EN 61326-	
Dielectric withstand voltage	1620 V AC 1 min	ute (sensed current: 10 mA) between main unit and power suppl
		age: 100 V to 240 V AC (consider ±10% voltage fluctuations for rated
Power supply	supply voltage) Rated power supp	oly frequency: 50 Hz/60 Hz, Expected transient overvoltage: 2500 \
Maximum rated	400 VA	
power consumption Clock		eap-year correcting 24-hour clock
Backup battery life	Approx. 10 years	s (at 23°C (73°F)) for clock and settings
Battery service life	Approx. 2 years when discharge	(discharged once/day, 23°C (73°F)) *Reference: Approx. 4 years
Dimensions		(16.77 in ±0.08 in) W x 177 mm ±2 mm (6.97 in ±0.08 in) H x 505
		±0.08 in) D (excluding protrusions) 493.8 oz ±17.6 oz) (main unit only)
Mass		733.7 oz ±35.3 oz) (with ANALOG UNIT 8966 installed)
Product warranty period	1 year	Start Manual (booklet), Instruction Manual (detailed edition) (CD-R
Accessories		CD-R), blank panel (blank slot only), rack installation hardware
Accuracy		
Accuracy guarantee conditions	Temperature and	humidity range: 23°C ±5°C (73°F ±9°F), 80% RH or less
Time axis accuracy	±0.001%	
Clock precision	±0.001%	
System (ATX moti CPU		a product with similar specifications
Main memory	DDR48GB	product man or man openioations
OS	Windows 10	
Startup disk LAN interface	SSD 120 GB	
Compatibility	JEEE 800 2 Ethan	mot 1000DACE T 100DACE TV 10DACE T
specifications	ILLE 602.5 Liller	rnet 1000BASE-T, 100BASE-TX, 10BASE-T
Number of ports Functions	DHCP, DNS, FTF	PHTTP
Connector	RJ-45	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
USB interface		
Compatibility specifications	USB 3.0 complia	ant x 4, USB 2.0 compliant x 4
Connected devices	Keyboard, mous	e, USB memory stick
Connector	Series A recepta	cle
Monitor output	VGA	Resolution: 2560 x 1600 dots (Max.)
Output type	HDMI	Resolution: 3840 x 2160 dots (Max.)
, 51.	Display Port Recommended	Resolution: 4096 x 2304 dots (Max.) resolution: 1920 x 1080 dots or better
External I/O termi	nal	
Terminal block	Push-button type	
	Maximum input voltage	+10 V DC
	1.	2.5 V to 10 V for high level, 0 V to 0.8 V for low level
	Input voltage	
External input	Response pulse width	$50\mathrm{ms}$ or more during high periods, $50\mathrm{ms}$ or more during low periods
External input	Response pulse width Pulse interval	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater
External input	Response pulse width Pulse interval Number of terminals	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2
External input	Response pulse width Pulse interval Number of terminals Functions	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event
External input	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2
	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output)
	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Number of	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level
	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Number of terminals	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level 50 V DC, 50 mA, 200 mW
	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Number of terminals Functions	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level 50 V DC, 50 mA, 200 mW
	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Maximum input voltage Tunctions Maximum input voltage Volta	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level 50 V DC, 50 mA, 200 mW Judgment (PASS), judgment (FAIL), occurrence of errors,
	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Number of terminals Functions Maximum input voltage External trigger	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level 50 V DC, 50 mA, 200 mW Judgment (PASS), judgment (FAIL), occurrence of errors, busy, trigger standby +10 V DC
External input External output	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Number of terminals Functions Maximum input voltage Maximum input voltage Maximum input voltage	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level 50 V DC, 50 mA, 200 mW 2 Judgment (PASS), judgment (FAIL), occurrence of errors, busy, trigger standby +10 V DC ON / OFF
	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Number of terminals Functions Maximum input voltage External trigger	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level 50 V DC, 50 mA, 200 mW 2 Judgment (PASS), judgment (FAIL), occurrence of errors, busy, trigger standby +10 V DC ON / OFF External trigger filter OFF: 1 ms or more during high periods, 2 us or more during low periods
External output	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Number of terminals Functions Maximum input voltage External trigger filter Response	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level 50 V DC, 50 mA, 200 mW 2 Judgment (PASS), judgment (FAIL), occurrence of errors, busy, trigger standby +10 V DC ON/OFF External trigger filter OFF: 1 ms or more during high periods, 2 us or more during low periods Trigger filter ON : 2.5 ms or more during high periods, 2.5 ms or more during low periods Rising/falling selection possible
External output	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Number of terminals Functions Maximum input voltage External trigger filter Response pulse width	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level 50 V DC, 50 mA, 200 mW 2 Judgment (PASS), judgment (FAIL), occurrence of errors, busy, trigger standby +10 V DC ON / OFF External trigger filter OFF: 1 ms or more during high periods, 2 us or more during low periods Trigger filter ON : 2.5 ms or more during high periods, 2.5 ms or more during high periods
External output	Response pulse width Pulse interval Number of terminals Functions Output type Output voltage Maximum input voltage Number of terminals Functions Maximum input voltage External trigger filter Response	50 ms or more during high periods, 50 ms or more during low periods 200 ms or greater 2 START, STOP, START/STOP, SAVE, ABORT, event Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level 50 V DC, 50 mA, 200 mW 2 Judgment (PASS), judgment (FAIL), occurrence of errors, busy, trigger standby +10 V DC ON/OFF External trigger filter OFF: 1 ms or more during high periods, 2 us or more during low periods Trigger filter ON: 2.5 ms or more during low periods Rising/falling selection possible Rising: Triggering occurs when the voltage rises from low

	Output type	Open drain output (active low, with 5 V voltage output)
	Output voltage	4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level
Trigger output	Maximum input voltage	50 V DC, 50 mA, 200 mW
	Output pulse	Level or pulse selection possible
	width	Level: Sampling period x data number after trigger Pulse: 2 ms ±1 ms
	Maximum input	+10 V DC
	voltage	
	Input voltage Response	2.5 V to 10 V for high level, 0 V to 0.8 V for low level 50 ns or more during high periods, 50 ns or more during low
External sampling	pulse width	periods
	Maximum input	10 MHz
	frequency Functions	External sampling clock input, rising/falling selection possible
Trigger	Turictions	External sampling clock input, namigraling selection possible
Trigger type	Digital comparis	on type
Trigger conditions		dition for trigger sources and interval trigger
	Analog, logic	-1-
Trigger course	Max. 108 chann Up to 4 analog to	riggers can be set for each analog channel.
Trigger source		gers can be set for each logic probe. ction is activated if all trigger sources are turned off.
	External trigger	ction is activated if all trigger sources are turned on.
	Level trigger	Triggering occurs when the set level rises (falls).
	Voltage drop	Triggering occurs when peak voltage drops below the set level (For a 50 Hz / 60 Hz commercial power supply only).
	trigger	* Not available with MR8990, U8991, or 8970
	Window trigger	Triggering occurs when leaving (OUT) or entering (IN) the trigger level upper limit and lower limit setting areas.
	-	Sets the period reference value and cycle range.
		Triggering occurs when the rising (falling) reference value
A +	Period trigger	period is measured and determined to be outside or within the cycle range.
Analog triggers		* Not available with MR8990, U8991, or 8970
		Sets the reference value and pulse width (glitch width). Triggering occurs if the value is below the set pulse width from
	Glitch trigger	rising or falling of the reference value.
		* Not available with MR8990 or U8991
	Specifying	Specifying events (1 to 4000) Counts the number of times conditions were fulfilled for each
	events	trigger source. Triggering occurs when the set number of
		times is reached. * Not available when the trigger conditions are set to AND
Logic trigger	Pattern trigger u	
Forcible trigger		le triggering can be prioritized over all trigger sources.)
Interval trigger		ible at specified measuring intervals (hours, minutes, or seconds) ditions are fulfilled when the measuring process starts.
		trigger conditions are met at the set measuring intervals.
Trigger filter Level setting	OFF, 10, 20, 50,	100, 150, 200, 250, 500, 1000, 2000, 5000, 10,000 samples
resolution	1 LSB (12/16-bit	unit)
	00/ 1 4000/ /	
Pre-trigger		y value set in 1% steps available),
		v value set in 1% steps available), ecording time for pre-trigger
Pre-trigger Trigger timing	displaying the re START Incompatible wit	coording time for pre-trigger th trigger function (Only analog trigger function can be enabled.)
	displaying the re	cording time for pre-trigger th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values
	displaying the re START Incompatible will If trigger condition	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds.
Trigger timing	displaying the re START Incompatible will If trigger condition	cording time for pre-trigger th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed/saved, an event mark is
Trigger timing	displaying the re START Incompatible will frigger condition	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. ons are no longer met: Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops.
Trigger timing Warning function	displaying the re- START Incompatible will frigger condition If trigger condition ON/OFF (trigger	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. ons are no longer met: Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops.
Trigger timing	displaying the re START Incompatible will If trigger condition. If trigger condition. ON/OFF (trigger Several data sand the window out the series of the ser	th trigger function (Only analog trigger function can be enabled.) In sare met Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. In sare no longer met: Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops. Ifunction, warning function) Tigger.
Trigger timing Warning function Auto trigger level	displaying the re START Incompatible wi if trigger condition. If trigger condition. ON/OFF (trigger Several data sar the window out the Number of samp	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops. Ifunction, warning function) nples are taken, and the average value is set as the criteria for
Trigger timing Warning function	displaying the re START Incompatible wi if trigger condition. If trigger condition. ON/OFF (trigger Several data sar the window out the Number of samp	th trigger function (Only analog trigger function can be enabled.) In the trigger function (Only analog trigger function can be enabled.) In the trigger function (Only analog trigger function can be enabled.) In the trigger function (Only analog trigger function can be enabled.) In the trigger function (Only analog trigger function) In the trigger function (Only analog trigger) In the trigger
Trigger timing Warning function Auto trigger level Waveform screen	displaying the re START Incompatible wii If trigger condition If trigger condition ON/OFF (trigger Several data sar the window ut Number of samp	th trigger function (Only analog trigger function can be enabled.) In sare met Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. In sare no longer met: Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops. Ifunction, warning function) Tigger.
Trigger timing Warning function Auto trigger level	displaying the re START Incompatible will If trigger condition. If trigger condition. ON/OFF (trigger Several data sar the window out Number of samp.	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. ons are no longer met: Channel numbers and measured values are displayed/saved, an event mark is displayed/saved, an event mark is displayed, and the alarm stops. function, warning function) mples are taken, and the average value is set as the criteria for rigger. less: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens
Trigger timing Warning function Auto trigger level Waveform screen	displaying the re START Incompatible wii If trigger condition. If trigger condition. ON/OFF (trigger Several data sur the window unto Number of samp Waveform display in chronological order Max. 16 sheets	th trigger function (Only analog trigger function can be enabled.) In the trigger function (Only analog trigger function can be enabled.) In a remet : Channel numbers and measured values are displayed, and an alarm sounds. In a reno longer met : Channel numbers and measured values are displayed, saved, an event mark is displayed, and the alarm stops. If function, warning function) In a retaken, and the average value is set as the criteria for rigger. It is set as the criteria for rigger.
Trigger timing Warning function Auto trigger level Waveform screen Display format	displaying the re START Incompatible will If trigger condition. If trigger condition. ON/OFF (trigger Several data san the window out the win	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops. if function, warning function) nples are taken, and the average value is set as the criteria for rigger. oles: Select from 100, 200, 300, 400, and 500
Trigger timing Warning function Auto trigger level Waveform screen Display format	displaying the re START Incompatible wii If trigger condition. If trigger condition. ON/OFF (trigger Several data san the window out Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON/OFF.	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In a remet : Channel numbers and measured values are displayed, and an alarm sounds. In a remet : Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops. If function, warning function) In are taken, and the average value is set as the criteria for rigger. It is set as the criteria for rigger. It is screen, 2 screens, 4 screens, 8 screens, 16 screens It is bipsplaye up to 64 channels per sheet. Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveform
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display	displaying the re START Incompatible wil If trigger condition If trigger condition ON/OFF (trigger Several data sar the window out under Number of samp Waveform Waveform Max. 16 sheets "The display form ON / OFF Waveforms are of screen, whereas	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. ons are no longer met: Channel numbers and measured values are displayed, and an alarm sounds. ons are no longer met: Channel numbers and measured values are displayed, and the alarm stops. function, warning function) mples are taken, and the average value is set as the criteria for rigger. Jes: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. * Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveform the zoomed waveforms are displayed in the bottom part.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function	displaying the re START Incompatible wil If trigger condition If trigger condition ON/OFF (trigger Several data sar the window out under Number of samp Waveform Waveform Max. 16 sheets "The display form ON / OFF Waveforms are of screen, whereas	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In sare met : Channel numbers and measured values are displayed, and an alarm sounds. In sare no longer met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops. In function, warning function) In plea are taken, and the average value is set as the criteria for rigger. It screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveforms the zoomed waveforms are displayed in the bottom part.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display	displaying the re START Incompatible wii If trigger condition If trigger condition If trigger condition ON/OFF (trigger Several data sar the window unty Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON/OFF Waveforms are of screen, whereas Displays wavefor Waveform color	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In a remet : Channel numbers and measured values are displayed, and an alarm sounds. In a remet : Channel numbers and measured values are displayed, and the alarm stops. If function, warning function) In a retaken, and the average value is set as the criteria for rigger. It is screen, 2 screens, 4 screens, 8 screens, 16 screens I bisplays up to 64 channels per sheet. Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveforms the zoomed waveforms are displayed in the bottom part. Trus over the entire waveform screen.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display	displaying the re START Incompatible wii If trigger condition If trigger condition If trigger condition ON/OFF (trigger Several data sar the window until the window until Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON / OFF Waveforms are screen, whereas Displays wavefor Waveform color Interpolation	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In sare met : Channel numbers and measured values are displayed, and an alarm sounds. In sare no longer met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops. In function, warning function) In plea are taken, and the average value is set as the criteria for rigger. It screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveforms the zoomed waveforms are displayed in the bottom part.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display	displaying the re START Incompatible wii If trigger condition If trigger condition If trigger condition ON/OFF (trigger Several data sar the window unty Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON/OFF Waveforms are of screen, whereas Displays wavefor Waveform color	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In a remet : Channel numbers and measured values are displayed, and an alarm sounds. In a remet : Channel numbers and measured values are displayed, and the alarm stops. If function, warning function) In a retaken, and the average value is set as the criteria for rigger. It is screen, 2 screens, 4 screens, 8 screens, 16 screens I bisplays up to 64 channels per sheet. Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveforms the zoomed waveforms are displayed in the bottom part. Trus over the entire waveform screen.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display	displaying the re START Incompatible wil If trigger condition If trigger condition If trigger condition ON/OFF (trigger Several data san the window out the variety of the condition Waveform display in chronological order Max. 16 sheets "The display form ON/OFF Waveforms are screen, whereas Displays wavefor Waveform color Interpolation Variable	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In sare met : Channel numbers and measured values are displayed, and an alarm sounds. In sare no longer met : Channel numbers and measured values are displayed, and the alarm stops. In function, warning function) In series are taken, and the average value is set as the criteria for rigger. It screen, 2 screens, 4 screens, 8 screens, 16 screens I bisplays up to 64 channels per sheet. Multiple sheets can be set for the same channel. It can be selected for each sheet. It splayed in chronological order in the top part of the waveform is the zoomed waveforms are displayed in the bottom part. I screens (32 colors) Linear Always ON Adjustable input waveform
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display	displaying the re START Incompatible wil If trigger condition If trigger condition If trigger condition ON/OFF (trigger Several data san the vindow out to Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON/OFF Waveforms are of Screen, whereas Displays wavefor Waveform Color Interpolation Variable display Vernier	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In sare met : Channel numbers and measured values are displayed, and an alarm sounds. In sare no longer met : Channel numbers and measured values are displayed, saved, an event mark is displayed, and the alarm stops. In function, warning function) In series are taken, and the average value is set as the criteria for rigger. In screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. It can be selected for each sheet. Stisplayed in chronological order in the top part of the waveform is the zoomed waveforms are displayed in the bottom part. In sover the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input)
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display	displaying the re START Incompatible wil If trigger condition If trigger condition If trigger condition ON/OFF (trigger Several data sand the window out the condition of the co	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed,saved, an event mark is displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed, and the alarm stops. function, warning function) mples are taken, and the average value is set as the criteria for rigger. oles: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveform the zoomed waveforms are displayed in the bottom part. rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF/ON
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display	displaying the re START Incompatible wii If trigger condition If trigger condition If trigger condition ON/OFF (trigger Several data sur the window until the window until Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON / OFF Waveforms are screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width	th trigger function (Only analog trigger function can be enabled.) ons are met Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. ons are no longer met: Channel numbers and measured values are displayed, and an alarm sounds. ons are no longer met: Channel numbers and measured values are displayed/saved, an event mark is displayed, and the alarm stops. Function, warning function) mples are taken, and the average value is set as the criteria for rigger. less: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveforms to be zoomed waveforms are displayed in the bottom part. Tims over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display	displaying the re START Incompatible wii If trigger condition ON/OFF (trigger Several data sar the window until Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON/OFF Waveforms are of Screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. ons are no longer met: Channel numbers and measured values are displayed, and an alarm sounds. ons are no longer met: Channel numbers and measured values are displayed, and the alarm stops. function, warning function) mples are taken, and the average value is set as the criteria for rigger. oles: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveform the zoomed waveforms are displayed in the bottom part. rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF/ON
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display	displaying the re START Incompatible wii If trigger condition If trigger condition If trigger condition ON/OFF (trigger Several data san the window out Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON/OFF Waveforms are of Screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In sare met : Channel numbers and measured values are displayed, saved, an event mark is displayed, and an alarm sounds. In sare no longer met : Channel numbers and measured values are displayed, saved, an event mark is displayed, and the alarm stops. In function, warning function) In ples are taken, and the average value is set as the criteria for rigger. It screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. It can be selected for each sheet. It splayed in chronological order in the top part of the waveform the zoomed waveforms are displayed in the bottom part. It was over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF/ON Wide, Standard, Narrow Displays waveforms upside down.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display	displaying the re START Incompatible wii If trigger condition ON/OFF (trigger Several data sart the window until the window until Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON / OFF Waveforms are screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can the screen in the same can be seen in the	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed,/saved, an event mark is displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed,/saved, an event mark is displayed, and the alarm stops. function, warning function) mples are taken, and the average value is set as the criteria for rigger. oles: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens * Displays up to 64 channels per sheet. * Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveforms are displayed in the bottom part. rms over the entire waveforms screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973 be adjusted as necessary. t by with mouse clicks and scroll back while measuring.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling	displaying the re START Incompatible wil If trigger condition Waveform display in chronological order Max. 16 sheets "The display form ON / OFF Waveforms are of Screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can It Scroll left or righ Always displays	th trigger function (Only analog trigger function can be enabled.) In a remet : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. In a remet : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an event mark is displayed, and the alarm stops. If unction, warning function) In a ser taken, and the average value is set as the criteria for rigger. It screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. It can be selected for each sheet. Stipplayed in chronological order in the top part of the waveform the zoomed waveforms are displayed in the bottom part. Tixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustmelt input waveform (Adjustmelt input waveform (Adjustmelt input waveform upside down. Not available with 8967, 8970, or 8973 De adjusted as necessary. Lib ywith mouse clicks and scroll back while measuring. the latest data by following the measuring process.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling Roll display	displaying the re START Incompatible wii If trigger condition ON/OFF (trigger Several data san the window out Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON / OFF Waveforms are screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can the Scroll left or righ Always displays The drawing stat The roll cannot be	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed,/saved, an event mark is displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed,/saved, an event mark is displayed, and the alarm stops. function, warning function) mples are taken, and the average value is set as the criteria for rigger. oles: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens * Displays up to 64 channels per sheet. * Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveforms are displayed in the bottom part. rms over the entire waveforms screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973 be adjusted as necessary. t by with mouse clicks and scroll back while measuring.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling Roll display Level monitor	displaying the re START Incompatible will If trigger condition Waveform display in chronological order Max. 16 sheets "The display form ON / OFF Waveforms are of Screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can It Scroll left or righ Always displays The drawing sta The roll cannot to Numerical	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed,/saved, an event mark is displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed,/saved, an event mark is displayed, and the alarm stops. on are a taken, and the average value is set as the criteria for rigger. oles: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens * Displays up to 64 channels per sheet. * Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveform the zoomed waveforms are displayed in the bottom part. rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustable input waveform (Adjustable input waveforms upside down. * Not available with 8967, 8970, or 8973 oe adjusted as necessary. t by with mouse clicks and scroll back while measuring. Ithe latest data by following the measuring process. rt position (left or right edge) can be selected.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling Roll display	displaying the re START Incompatible wii If trigger condition ON/OFF (trigger Several data san the window out Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON / OFF Waveforms are screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can the Scroll left or righ Always displays The drawing stat The roll cannot be	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed,/saved, an event mark is displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed,/saved, an event mark is displayed, and the alarm stops. on are a taken, and the average value is set as the criteria for rigger. oles: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens * Displays up to 64 channels per sheet. * Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveform the zoomed waveforms are displayed in the bottom part. rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustable input waveform (Adjustable input waveforms upside down. * Not available with 8967, 8970, or 8973 oe adjusted as necessary. t by with mouse clicks and scroll back while measuring. Ithe latest data by following the measuring process. rt position (left or right edge) can be selected.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling Roll display Level monitor	displaying the re START Incompatible will If trigger condition Waveform display in chronological order Max. 16 sheets "The display form ON / OFF Waveforms are of Screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can It Scroll left or righ Always displays The drawing sta The roll cannot to Numerical	th trigger function (Only analog trigger function can be enabled.) In a remet : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. In a remet : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an event mark is displayed, and the alarm stops. If unction, warning function) In a ser taken, and the average value is set as the criteria for rigger. It screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. It can be selected for each sheet. It is comed waveforms are displayed in the bottom part. This comed waveforms are displayed in the bottom part. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. Not available with 8967, 8970, or 8973 De adjusted as necessary. It by with mouse clicks and scroll back while measuring. the latest data by following the measuring process. It position (left or right edge) can be selected. Displays potential, time from trigger, time difference between "Displays potential, time from trigger, time difference between "Displays potential, time from trigger, time difference between
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling Roll display Level monitor function	displaying the re START Incompatible wii If trigger condition ON/OFF (trigger Several data sand the window until the window un	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In sare met : Channel numbers and measured values are displayed, saved, an event mark is displayed, and an alarm sounds. In sare no longer met : Channel numbers and measured values are displayed, saved, an event mark is displayed, and the alarm stops. In function, warning function) In sare taken, and the average value is set as the criteria for rigger. It screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. It can be selected for each sheet. displayed in chronological order in the top part of the waveform the zoomed waveforms are displayed in the bottom part. In sover the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. Not available with 8967, 8970, or 8973 De adjusted as necessary. It by with mouse clicks and scroll back while measuring. the latest data by following the measuring process. It position (left or right edge) can be selected. Displays potential, time from trigger, time difference between cursors, and potential difference.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling Roll display Level monitor	displaying the re START Incompatible wii If trigger condition ON/OFF (trigger Several data sar the window und Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON/OFF Waveforms are screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can the Scroll left or righ Always displays The drawing sta The roll cannot the Numerical display Tracing cursor Horizontal cursor	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values are displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed, and an alarm sounds. ons are no longer met : Channel numbers and measured values are displayed, and the alarm stops. of function, warning function) mples are taken, and the average value is set as the criteria for rigger. oles: Select from 100, 200, 300, 400, and 500 1 screen, 2 screens, 4 screens, 8 screens, 16 screens bisplays up to 64 channels per sheet. Multiple sheets can be set for the same channel. at can be selected for each sheet. displayed in chronological order in the top part of the waveforms to be zoomed waveforms are displayed in the bottom part. Tims over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustable input waveform (Adjustable input waveform (Adjustable with 8967, 8970, or 8973 De adjusted as necessary. The yoilton (left or right edge) can be selected. De displayed when the overlay function is turned on. Up to 8 cursors can be displayed. Displays potential, time from trigger, time difference between cursors, and potential difference. Up to 8 cursors can be displayed. Displays potential and potential difference. Displays potential and potential difference.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling Roll display Level monitor function	displaying the re START Incompatible will If trigger condition If the window out the wi	th trigger function (Only analog trigger function can be enabled.) In a remet : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. In a remet : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. In a remet : Channel numbers and measured values are displayed, and the alarm stops. In function, warning function) In are taken, and the average value is set as the criteria for rigger. I screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. It can be selected for each sheet. It is a comed waveforms are displayed in the bottom part. This comed waveforms are displayed in the bottom part. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973 De adjusted as necessary. It by with mouse clicks and scroll back while measuring. the latest data by following the measuring process. It position (left or right edge) can be selected. De tals a cursors can be displayed. "Displays potential, time from trigger, time difference between cursors, and potential difference. Up to 8 cursors can be displayed. "Displays potential and potential difference. Up to 8 gauges can be displayed. "Displays potential and potential difference. Up to 8 gauges can be displayed.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling Roll display Level monitor function Cursor	displaying the re START Incompatible wii If trigger condition ON/OFF (trigger Several data same the window out Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON/OFF Waveforms are screen, whereas Displays waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can t Scroll left or righ Always displays The drawing sta The roll cannot t Numerical display Tracing cursor Horizontal cursor Gauge Jump	th trigger function (Only analog trigger function can be enabled.) In trigger function (Only analog trigger function can be enabled.) In sare met : Channel numbers and measured values are displayed, and an alarm sounds. In sare no longer met : Channel numbers and measured values are displayed, and an alarm sounds. In some are taken, and the average value is set as the criteria for rigger. It screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. It screen the same channel. It screen the same channel. It is splayed in chronological order in the top part of the waveform sthe zoomed waveforms are displayed in the bottom part. It is comed waveforms are displayed in the bottom part. It is cover the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. Not available with 8967, 8970, or 8973 De adjusted as necessary. It by with mouse clicks and scroll back while measuring. The latest data by following the measuring process. It position (left or right edge) can be selected. De displayed when the overlay function is turned on. Up to 8 cursors can be displayed. Displays potential, time from trigger, time difference between cursors, and potential difference. Up to 8 gauges can be displayed. Click with the mouse to jump to the specified location.
Trigger timing Warning function Auto trigger level Waveform screen Display format Sheet function Zoom display Full screen display Waveform display Enlarge / Reduce Waveform scrolling Roll display Level monitor function	displaying the re START Incompatible wii If trigger condition ON/OFF (trigger Several data sand the window under Number of samp Waveform display in chronological order Max. 16 sheets "The display form ON / OFF Waveforms are to screen, whereas Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can the Scroll left or right Always displays The drawing stat The roll cannot to Numerical display Tracing cursor Horizontal cursor Gauge Jump Input available of	th trigger function (Only analog trigger function can be enabled.) In a remet : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. In a remet : Channel numbers and measured values are displayed/saved, an event mark is displayed, and an alarm sounds. In a remet : Channel numbers and measured values are displayed, and the alarm stops. In function, warning function) In are taken, and the average value is set as the criteria for rigger. I screen, 2 screens, 4 screens, 8 screens, 16 screens Displays up to 64 channels per sheet. Multiple sheets can be set for the same channel. It can be selected for each sheet. It is a comed waveforms are displayed in the bottom part. This comed waveforms are displayed in the bottom part. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973 De adjusted as necessary. It by with mouse clicks and scroll back while measuring. the latest data by following the measuring process. It position (left or right edge) can be selected. De tals a cursors can be displayed. "Displays potential, time from trigger, time difference between cursors, and potential difference. Up to 8 cursors can be displayed. "Displays potential and potential difference. Up to 8 gauges can be displayed. "Displays potential and potential difference. Up to 8 gauges can be displayed.

		20 M, 10 M, 5 M, 2 M, 1 M, 500 k, 200 k, 100 k, 50 k, 20 k, 10 k, 5		
	Real-time sampling	k, 2 k, 1 k, 500, 200, 100, 50, 20, 10, 5, 2, 1 [S/s] External sampling: Max. 10 MHz depending on external sampling	Calcul	
		terminal input signal	Odiodi	
		Maximum configurable sampling speed [Using internal SSD as save destination]		
0		5 MS/s (up to 12 channels), 2 MS/s (13 to 32 channels), 1 MS/s (33 to 64 channels), 500 kS/s (65 or more channels)		
Sampling speed	With real-time saving enabled	[Using USB Drive Z4006 as save destination] 1 MS/s (up to 12 channels), 500 kS/s (13 to 24 channels), 200 kS/S	Nimm	
	*: Values in parentheses indicate	(25 to 64 channels), 100 kS/s (65 or more channels) [Using FTP transmission as save destination]	Numei	
	number of channels	200 kS/s (up to 12 channels), 100 kS/s (13 to 24 channels), 50 kS/s (25 to 64 channels), 20 kS/s (65 or more channels)		
		*USB memory stick performance is guaranteed only when connected via USB 3.0 connector.	Wave	
		*Double all channel counts if the U8991 is installed.	Maxim of calc	
		[Fixed recording lengths] When using 27 modules: 2 M (with U8991), 5 M (with U8975, MR8990),	Calcula	
		10 M (54 channels) [points] When using 16 modules: 5 M (with U8991), 10 M (with U8975,	Maxim length	
		MR8990), 20 M (32 channels) [points] When using 8 modules: 10 M (with U8991), 20 M (with U8975,	Standa	
		MR8990), 50 M (16 channels) [points]	Calcul	
	Real-time	When using 4 modules: 20 M (with U8991), 50 M (with U8975, MR8990), 100 M (8 channels) [points]	Calcul	
Maximum	sampling	[User-specified recording lengths] When using 27 modules: 4194300 (with U8991), 8388600 (with U8975,	Memo	
recording length		MR8990), 16777200 (54 channels) [points] When using 16 modules: 8388600 (with U8991), 16777200 (with U8975,	Max. c	
		MR8990), 33554400 (32 channels) [points]	Past w	
		When using 8 modules: 16777200 (with U8991), 33554400 (with U8975, MR8990), 67108800 (16 channels) [points]	compa	
		When using 4 modules: 33554400 (with U8991), 67108800 (with U8975, MR8990), 134217600 (8 channels) [points]	Bulk sa Displa	
	With real-time	*User-configurable in units of 100 points. Determined by space available on save destination, file system,	Wave	
	saving enabled	and number of measurement channels		
Repeat		ent, repeat measurement, user-specified count user-specified count settings are not available when real-time saving		
measurement	is enabled.	and offset, 2-point input, Model, Output rate, dB, Rating	Search	
Scaling	* Model: Select a	model to configure the scaling settings automatically. tion and automatic scaling are available when a current unit is used.	Searci	
	Title comments,	channel comments		
Comments	Channel numbe waveform screen	rs and channel comments are added on the setting screen and n.		
Help	Displays the inst	ruction manual	Search	
Saving	SSD	Internal SSD (480 GB)	Search	
	USB MEMORY STICK	Z4006 (16 GB)	Searci	
Save destination	Sending to FTP	PC with a LAN connection	Contin	
	Sending by email	Send file to specified email address	Display	
File format	FAT, FAT32, NTF		Other	
Filename Processing identical		nd Japanese input number at the beginning before saving (Date and time added after	A	
filenames	the file when trans		Auto ra	
		aves the data obtained for the recording length at the end of a	Beep s	
Auto saving	measuring process. * Settings files are not supported.			
	* If a memory divi while data is bei	sion is set, it is possible for measurement of the next block to start	Sendir	
Deletine and sovies	Deletes the files	with the oldest creation dates and saves data when there is no		
Deleting and saving	* Enabled for auto	n the specified media at the save destination. saving	Initializ	
	Settings data Measurement	SET	Self-ch	
	data	Binary format (.MEM), text format (.CSV)	Langu	
Types of saved data	Index Displayed	Divided saving (.IDX)	Error a display	
Types of saved data	Displayed images	Divided saving (IDX) .BMP, .PNG, .JPG	Error a display Time v	
Types of saved data	Displayed		Error a display Time v Zero p	
	Displayed images Numerical calculation results Startup	.BMP, .PNG, .JPG .CSV STARTUP.SET	Error a display Time v Zero p display Wavefe	
Types of saved data Saving channels	Displayed images Numerical calculation results Startup Select a channe when saving me	.BMP, PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data.	Error a display Time v Zero p display Wavefe	
	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement da	.BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value	Error a display Time v Zero p display Wavefe backg	
Saving channels	Displayed images Numerical calculation results Startup Select a channe when saving me	.BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value before saving.	Error a display	
Saving channels	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement da (from 2 to 1000) b	.BMP, PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value before saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every	Error a display Time v Zero p display Wavefe backg	
Saving channels	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement da (from 2 to 1000) b Types of saved	.BMP, PNG, JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value refore saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data,	Error a display Time v Zero p display Wavefe backg Restar Time s	
Saving channels Culled data saving	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) tc Types of saved Binary format	.BMP, PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value elefore saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data	Error a display Time v Zero p display Wavefe backgr	
Saving channels Culled data saving	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) b Types of saved Binary format Text format Numerical calcuresults	.BMP, PNG, JPG .CSV STARTUP.SET I from all the channels available or from the displayed channels assurement data. ata (ext format) is culled according to the specified culling value lefore saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data OFF, By the calculation number	Error a display Time v Zero p display Wavefe backgi Restar Time s Numbi sensor	
Saving channels Culled data saving File division	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) tc Types of saved Binary format Text format Numerical calc results New files or exis	.BMP, PNG, JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value elefore saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1.000,000 points of data OFF, By the calculation number ting files	Error a display Time v Zero p display Wavefe backg Restar Time s Numbb	
Saving channels Culled data saving	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) b Types of saved Binary format Text format Numerical calc results New files or exis * Enabled when n	.BMP, PNG, JPG .CSV STARTUP.SET I from all the channels available or from the displayed channels assurement data. ata (ext format) is culled according to the specified culling value lefore saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data OFF, By the calculation number	Error a display Time v Zero p display Wavefe backg Restar Time s Numbb	
Saving channels Culled data saving File division	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) b Types of saved Binary format Text format Numerical calc results New files or exis * Enabled when n	.BMP, PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value before saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data Every 1,000,000 poi	Error a display Time v Zero p display Wavefe backgr Restar Time s	
Saving channels Culled data saving File division	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) to Types of saved Binary format Text format Numerical calc results New files or exis **Enabled when n * Select whether t measure. Instant saving	.CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value selfore saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data Every 1,000,000 points of data OFF, By the calculation number ting files umerical calculation results are saved. o create a new file or add data to an existing file when starting to Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set.	Error a display Time v Zero p display Wavefe backgi Restar Time s Numbi sensor	
Saving channels Culled data saving File division Specifying files SAVE operation	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) b Types of saved Binary format Text format Numerical calc results New files or exis * Enabled when n	.BMP, PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value before saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data Every 1,000,000 poi	Error a display Time v Zero p display Wavefe backgi Restar Time s Numbi sensor	
Saving channels Culled data saving File division Specifying files	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) to Types of saved Binary format Text format Numerical calc results New files or exis **Enabled when n * Select whether t measure. Instant saving	.CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value before saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data E	Error a display Time v Zero p display Wavefe backgi Restar Time s Numbi sensor	
Saving channels Culled data saving File division Specifying files SAVE operation	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) to Types of saved Binary format Text format Numerical calcresults New files or exis * Enabled when n * Select whether t measure. Instant saving Saving range	.BMP, PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value elefore saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 16,000 points of data, Every 1,000,000 points of data. Every 1,000,000 points of data OFF, By the calculation number ting files umerical calculation results are saved. o create a new file or add data to an existing file when starting to Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set.	Error a display Time v Zero p display Wavefe backg! Restar Time s Numbu sensor	
Saving channels Culled data saving File division Specifying files SAVE operation Loading data	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) tc Types of saved Binary format Text format Numerical calc results New files or exis * Enabled when n * Select whether t measure. Instant saving Saving range	.CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value selfore saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data Every 1,000,000 points of data Undertied of the selform	Error a display Time v Zero p display Wavefe backgi Restar Time s Numbisensoi	
Saving channels Culled data saving File division Specifying files SAVE operation Loading data	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement diffrom 2 to 1000 to	.CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value selfore saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data Every 1,000,000 points of data United to OFF, By the calculation number Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation. Internal SSD (480 GB) Z4006 (16 GB)	Error a display Time v Zero p display Wavefe backg! Restar Time s Numbu sensor	
Saving channels Culled data saving File division Specifying files SAVE operation Loading data Loading source	Displayed images Numerical calculation results Select a channe when saving me Measurement di (from 2 to 1000) to 1000	.CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (ext format) is culled according to the specified culling value referore saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data. Every 1,000,000 points of data OFF, By the calculation number Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation. Internal SSD (480 GB) Z4006 (16 GB) .SET Binary format (MEM), text format (.CSV) Divided saving (.IDX)	Error a display Time v Zero p odisplay Wavefe backg Restar Time s Numb sensor	
Saving channels Culled data saving File division Specifying files SAVE operation Loading data Loading source Types of loaded data	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) to Types of 1000) to Types of saved Binary format Text format Numerical calcuresults New files or exis Enabled when n Select whether to measure. Instant saving Saving range SSD USB MEMORY STICK Settings data Measurement data Index Startup	.CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value selfore saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data Every 1,000,000 points of data OFF, By the calculation number Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. *Enabled only when data is saved with the SAVE operation. Internal SSD (480 GB) Z4006 (16 GB) .SET Binary format (MEM), text format (.CSV)	Error a display Time v Zero p display Wavefe backg: Restar Time s Numbbsensor	
Saving channels Culled data saving File division Specifying files SAVE operation Loading data Loading source Types of loaded	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) to Types of saved Binary format Text format Numerical calc results New files or exis Enabled when n Select whether t measure. Instant saving Saving range SSD USB MEMORY STICK Settings data Measurement data Index Startup	.CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value elefore saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data. Every 1,000,000 points of data OFF, By the calculation number Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. Enabled only when data is saved with the SAVE operation. Internal SSD (480 GB) Z4006 (16 GB) .SET Binary format (MEM), text format (CSV) Divided saving (IDX) STARTUP.SET	Error a display Time v Zero p display Wavefe backg! Restar Time s Numbu sensor	
Saving channels Culled data saving File division Specifying files SAVE operation Loading data Loading source Types of loaded data Numerical calcula	Displayed images Numerical calculation results Startup Select a channe when saving me Measurement di (from 2 to 1000) t Types of saved Binary format Text format Text format Numerical calc results New files or exis Enabled when n 's elect whether t measure. Instant saving Saving range SSD USB MEMORY STICK Settings data Measurement data Index Startup stions 108 items x Mea	.CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (ext format) is culled according to the specified culling value referore saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data. Every 1,000,000 points of data OFF, By the calculation number Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation. Internal SSD (480 GB) Z4006 (16 GB) .SET Binary format (MEM), text format (.CSV) Divided saving (.IDX)	Error a display Time v Zero p display Wavefe backg: Restar Time s Numbbsensor	

Calculation items	Peak to peal value, maximum value, minimum value, high level, low level, average value, RMS value, standard deviation, rise time (*), fall time (*), frequency (*), period (*), pulse duty ratio (*), pulse count, area value, X-Y area value, time difference (*), phase difference (*), time to maximum value, time to minimum value, specified level time, specified time level, pulse width (*), four arithmetic operations, median value, amplitude, integration value burst width (*), XY waveform angle, overshoot, undershoot, + Width (*), - Width (*) * Calculations for statistical function **Transtate** **Angles abspace losis shoreple, using home processing.**		
	Targeted	Analog channels, logic channels, waveform processing	
	waveforms	channels	
Numerical judgment	Judgment	ON/OFF	
rvamencai jaagment	settings		
	Stop	PASS, FAIL, PASS&FAIL	
	conditions		
Waveform proces	sing		
Maximum number	16 formulas		
of calculations			
Calculation range	Full range or Sp	ecified segments	
Maximum recording	2,000,000 point	ts	
length	77		
Standard operator	+,-,×,÷		
0 1 1 " "		square root, logarithm, exponentiation, SIN, ASIN, COS, ACOS,	
Calculation items		erentiation, secondary differentiation, integration, secondary ring average, slide, PLCS	
Momory cogmont	_	g avolago, oliao, i 200	
Memory segment			
Max. divisions	1024 blocks		
Block search	Search from the	data that is saved in divided memory block.	
Past waveform		measured waveform data into the desired block area and	
comparison		creen to the current waveform.	
Bulk save		ange of data in all blocks	
Display	Specify a block	to display.	
Waveform search			
		Level, window-in, window-out	
	Trigger	If a logic channel is chosen as the target channel, searches can	
		be made using logic triggers.	
	Peak	Maximum, minimum, local maximum, local minimum	
Search methods		Histogram or standard deviation	
	Concierge	*Choose to compare to corresponding fundamental waves or immediately prior waveforms.	
		Event mark, cursor, time (specified as absolute time, relative time,	
	Jump	or number of points), trigger point, search mark	
	Full range	All data stored in internal memory	
Search range	Specified	Ob	
	interval	Choose a range specified by A/B or C/D.	
Search count	Up to 10,000 poi	nts	
		ecified number of search targets remain in the search range after	
Continuous search		arch, you can continue to search waveform data after the last search	
6: 1	point.		
Display method	Specify a searc	h location to display the data.	
Other	Available		
Auto range	automatically se		
Auto range	automatically se * Not available wi	ot. Ith external sampling	
Auto range Beep sound	automatically se * Not available wi OFF, Alarm only	ot. th external sampling , Alarm and operation	
	automatically se * Not available wi OFF, Alarm only Sending e-mails	ot. th external sampling , Alarm and operation	
Beep sound	automatically se * Not available wi OFF, Alarm only Sending e-mails Sending	at. th external sampling , Alarm and operation s via SMTP	
	automatically se * Not available wi OFF, Alarm only Sending e-mails	st. tth external sampling , Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation	
Beep sound	automatically se * Not available wi OFF, Alarm only Sending e-mails Sending	at. th external sampling , Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a	
Beep sound Sending e-mails	automatically se * Not available wi OFF, Alarm only Sending e-mails Sending timing Sent data	at. th external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data.	
Beep sound Sending e-mails Initialization	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data	st. th external sampling , Alarm and operation svia SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization	
Beep sound Sending e-mails Initialization Self-check	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check,	st. the external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check	
Beep sound Sending e-mails Initialization Self-check Language	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data	st. the external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check	
Beep sound Sending e-mails Initialization Self-check Language Error and warning	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl	st. the external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display	automatically se Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de	at. the external sampling the Atarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display	automatically se Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de	at. th external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position	automatically se Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de	at. the external sampling the Atarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display	automatically se Not available will OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF	at. the external sampling the Atarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position	automatically se Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages	at. the external sampling the Atarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen	automatically se Not available will OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF	at. the external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color	automatically se Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No	at. the external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen	automatically se Not available will OFF, Alarm only Sending e-mails Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted or No Permitted if set restarted.	att. the external sampling the external sampling the Alarm and operation siva SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values t permitted the permitted the permitted during the measuring process, the unit is	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission	automatically se * Not available w OFF, Alarm only Sending e-mails Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted or No * Permitted if set restarted. * Not permitted: \$	att the external sampling t, Alarm and operation via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values t permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings	automatically se Not available will OFF, Alarm only Sending e-mails Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted or No Permitted if set restarted.	att the external sampling t, Alarm and operation via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values t permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current	automatically se *Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted or No *Permitted: If set set the date and	att the external sampling t, Alarm and operation via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values t permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No * Permitted or No * Not permitted: Set the date and Up to 9 with co	at. the external sampling 7, Alarm and operation 8 via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. Imal time, date, data values It permitted tings are changed during the measuring process, the unit is settings cannot be changed during the measuring process. It time. It measurements to the measuring process. It ime. In the measuring process the unit is settings cannot be changed during the measuring process. It ime. In the measuring process the unit is settings cannot be changed during the measuring process.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current	automatically se **Not available w OFF, Alarm only Sending e-mails Sending Se	att the external sampling f, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values It permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Send tata Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No * Permitted if set restarted. * Not permitted: Set the date and Up to 9 with co 8971 Current Unit	at. the external sampling the hexagon and operation size SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values It permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time. In the measuring process of time.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Sending timing Sent data Waveform data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted or No * Permitted or No * Permitted. * Not permitted. * Not permitted. Set the date and Up to 9 with co 8971 Current Unit Unit708773ch Current Unit	at. the external sampling 7, Alarm and operation 8 via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. Imal time, date, data values It permitted tings are changed during the measuring process, the unit is settings cannot be changed during the measuring process. It time. It measurements to the measuring process. It ime. In the measuring process the unit is settings cannot be changed during the measuring process. It ime. In the measuring process the unit is settings cannot be changed during the measuring process.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No * Permitted if set restarted. **Not permitted: Set the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic	at. the external sampling It, Alarm and operation It is via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. It permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time. It permitted tings cannot be changed during the measuring process. It time. It measuring process. It measuring process. It measuring process. It may be changed during the measuring process.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No * Permitted: ff set restarted. * Not permitted: \$ Set the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit	att the external sampling 7, Alarm and operation Sivia SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. Imal time, date, data values It permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time. Imbinations of Current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27)	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Send data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No * Permitted or No * Not permitted: \$ set restarted. * Not permitted: \$ set the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green	at. the external sampling It, Alarm and operation It is via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. It permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time. It permitted tings cannot be changed during the measuring process. It time. It measuring process. It measuring process. It measuring process. It may be changed during the measuring process.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections	automatically se *Not available w OFF, Alarm only Sending e-mails Sending timing Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted: or No *Permitted: If set restarted. *Not permitted: If set restarted. Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green Green	att the external sampling 7, Alarm and operation Sivia SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. Imal time, date, data values It permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time. Imbinations of Current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27)	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Sending timing Send data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No **Permitted displays the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green Green (flashing)	at: the external sampling the Atarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values It permitted tings are changed during the measuring process, the unit is settings cannot be changed during the measuring process. It time. It me. It me. It me. It is a to current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on)	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Send data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No * Permitted: fset restarted. * Not permitted: Set the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green Green Green Green Green Grange	att. the external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values t permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. d time. mbinations of Current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is on)	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Sending timing Send data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No **Permitted displays the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green Green (flashing)	at: the external sampling the Atarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values It permitted tings are changed during the measuring process, the unit is settings cannot be changed during the measuring process. It time. It me. It me. It me. It is a to current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on)	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations	automatically se * Not available w OFF, Alarm only Sending e-mails Sending timing Send data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No * Permitted: fset restarted. * Not permitted: Set the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green Green Green Green Green Grange	att. the external sampling 7, Alarm and operation 8 via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. Imal time, date, data values t permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time. Imbinations of Current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is off) Syntax error in command received "Goes off with a CLS command.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Sending timing Sent data Waveform data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted: or No *Permitted: ff set restarted. "Not permitted: if set restarted." Value of the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit Green (flashing) Orrange Not on Red	at. the external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values t permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. d time. mbinations of Current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is on) Main power supply is off (the power switch on the rear is off) Syntax error in command received "Goes off with a CLS command. Or when a warning occurs	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations POWER LED display CMD ERR LED	automatically se *Not available w OFF, Alarm only Sending e-mails Sending Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted or No *Permitted: If set restarted. *Not permitted: If set restarted. Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green (flashing) Orange Not on	at. the external sampling It, Alarm and operation It is via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check isish tails of errors and warnings when they occur. It permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is settings cannot be changed during the measuring process. It is setting the measuring the measuring process. It is setting the measuring process. It is setting the measuring process. It is setting the measuring the measuring process. It is setting the measuring the measuring process. It is setting the measuring the measuring process. It is setting t	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations POWER LED display CMD ERR LED	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Send tata Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No **Permitted or No **Permitted if set restarted. **Not permitted: If set restarted. Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 6873 Logic Unit Green (flashing) Orange Not on Red Not on Red	att. the external sampling to Alarm and operation size SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. Imal time, date, data values It permitted tings are changed during the measuring process, the unit is settings cannot be changed during the measuring process. It time. Imbinations of Current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is on) Main power supply is off (the power switch on the rear is off) Syntax error in command received "Goes off with a CLS command. Or when a warning occurs No error or warning Ambient temperature is too high (> 35°C / 95°F)	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations POWER LED display CMD ERR LED	automatically se *Not available w OFF, Alarm only Sending e-mails Sending Sending timing Sent data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted or No *Permitted: If set restarted. *Not permitted: If set restarted. Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green (flashing) Orange Not on	st. the external sampling 7, Alarm and operation 8 via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. Imal time, date, data values t permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time. Imal time, date, data values Aux. 3 Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is on) Main power supply is off (the power switch on the rear is off) Syntax error in command received "Goes off with a CLS command. Or when a warning occurs No error or warning Ambient temperature is too low (< 10°C / 50°F) Ambient temperature is too low (< 10°C / 50°F)	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations POWER LED display CMD ERR LED	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Send tata Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No **Permitted or No **Permitted if set restarted. **Not permitted: If set restarted. Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 6873 Logic Unit Green (flashing) Orange Not on Red Not on Red	at. the external sampling 7, Alarm and operation 8 via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check isish tails of errors and warnings when they occur. Imal time, date, data values It permitted tings are changed during the measuring process, the unit is settings cannot be changed during the measuring process. It ime. Imbinations of Current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is on) Main power supply is off (the power switch on the rear is off) Syntax error in command received "Goes off with a CLS command. Or when a warning occurs No error or warning Ambient temperature is too high (> 35°C / 95°F) Ambient temperature is too low (< 10°C / 50°F) CPU load factor 80% or more	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations POWER LED display CMD ERR LED display	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Send tata Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON / OFF Black or white Permitted or No * Permitted if set restarted. **Not permitted: f set restarted. Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green (flashing) Orange Not on Red Not on Red Purple Yellow	attention and operation size SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. Imal time, date, data values It permitted tings are changed during the measuring process, the unit is settings cannot be changed during the measuring process. It time. It mail time, date, data values It permitted tings are changed during the measuring process. It imal time, date, data values It permitted tings are changed during the measuring process. It imal time, date, data values It permitted tings are changed during the measuring process. It imal time, date, data values Againg in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is on) Main power supply is off (the power switch on the rear is off) Syntax error in command received "Goes off with a CLS command. Or when a warning occurs No error or warning Ambient temperature is too low (< 10°C / 50°F) CPU load factor 80% or more "The average load factor is updated every 0.5 seconds.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations POWER LED display CMD ERR LED	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Sending timing Send data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No **Permitted or No **Permitted if set restarted. **Not permitted: Set the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green (flashing) Orange Not on Red Not on Red Purple Yellow Blue	att. the external sampling to Alarm and operation size SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. It permitted tings are changed during the measuring process, the unit is settings are changed during the measuring process. It time. It permitted tings cannot be changed during the measuring process. It time. It permitted tings are changed during the measuring process. It time. Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is on) Main power supply is off (the power switch on the rear is off) Syntax error in command received "Goes off with a CLS command. Or when a warning occurs No error or warning Ambient temperature is too low (< 10°C / 50°F) Arnbient temperature is too low (< 10°C / 50°F) Arnbient temperature is too low (< 10°C / 50°F) CPU load factor 800% or more "The average road factor is updated every 0.5 seconds. The instrument is in the trigger standby state.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations POWER LED display CMD ERR LED display	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Send tata Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No **Permitted or No **Permitted if set restarted. **Not permitted: Set the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green (flashing) Orange Not on Red Not on Red Purple Yellow Blue Green Green Green Green Green Green Fed Red Purple Yellow Blue Green	at. the external sampling t, Alarm and operation s via SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. imal time, date, data values t permitted tings are changed during the measuring process, the unit is Settings cannot be changed during the measuring process. It time. mbinations of Current Unit 8971, 3ch Current Unit 8977 Max. 4 Max. 3 Max. 3 Max. 3 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is on) Main power supply is off (the power switch on the rear is off) Syntax error in command received "Goes off with a CLS command. Or when a warning occurs No error or warning Ambient temperature is too high (> 35°C / 95°F) CPU load factor 80% or more "The average load factor is updated every 0.5 seconds. The instrument is in the trigger standby state. Recording in progress	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations POWER LED display CMD ERR LED display	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Sending timing Send data Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No **Permitted or No **Permitted if set restarted. **Not permitted: Set the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green (flashing) Orange Not on Red Not on Red Purple Yellow Blue	att. the external sampling to Alarm and operation size SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish tails of errors and warnings when they occur. It permitted tings are changed during the measuring process, the unit is settings are changed during the measuring process. It time. It permitted tings cannot be changed during the measuring process. It time. It permitted tings are changed during the measuring process. It time. Max. 4 Max. 3 Max. 3 Supported locations (slots 25 to 27) POWER ON Aging in progress (for 30 minutes after the power is turned on) STANDBY (the power switch on the rear is on) Main power supply is off (the power switch on the rear is off) Syntax error in command received "Goes off with a CLS command. Or when a warning occurs No error or warning Ambient temperature is too low (< 10°C / 50°F) Arnbient temperature is too low (< 10°C / 50°F) Arnbient temperature is too low (< 10°C / 50°F) CPU load factor 800% or more "The average road factor is updated every 0.5 seconds. The instrument is in the trigger standby state.	
Beep sound Sending e-mails Initialization Self-check Language Error and warning display Time value display Zero position display Waveform screen background color Restart permission Time settings Number of current sensor connections Module limitations POWER LED display CMD ERR LED display	automatically se **Not available w OFF, Alarm only Sending e-mails Sending timing Send tata Waveform data Memory check, Japanese, Engl Displays the de Hours, sexages ON/OFF Black or white Permitted or No **Permitted or No **Permitted if set restarted. **Not permitted: Set the date and Up to 9 with co 8971 Current Unit U8977 3ch Current Unit 8973 Logic Unit Green (flashing) Orange Not on Red Not on Red Purple Yellow Blue Green Green Green Green Green Green Fed Red Purple Yellow Blue Green	att the external sampling It he external sampling It harm and operation It was a SMTP Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data. Initialization, setting initialization, complete initialization LAN check, media check ish It permitted It permitted tings are changed during the measuring process, the unit is settings are changed during the measuring process, the unit is settings cannot be changed during the measuring process. It imme. It permitted	

Option Specifications (sold separately)

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



ANALOG UNIT 89	66 (Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment, Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)
Measurement functions	No. of channels: 2, for voltage measurement
Input terminals	Isolated BNC connector (input impedance 1 M Ω , input capacitance 30 pF) Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)
Measurement range	100, 200, 400 mV f.s. 1, 2, 4, 10, 20, 40, 100, 200, 400 V f.s., 12 ranges AC voltage for possible measurement/display: 280 V rms Low-pass filter: 5/50/500/5 k/50 k/500 kHz
Measurement resolution	1/2000 of measurement range (using 12-bit A/D conversion)
Maximum sampling rate	20 MS/s (simultaneous sampling in 2 channels)
Measurement accuracy	±0.5% f.s. (with filter 5 Hz, zero position accuracy included)
Frequency characteristics	DC to 5 MHz -3 dB (with AC coupling: 7 Hz to 5 MHz -3 dB)
Input coupling	AC/DC/GND
Maximum input voltage	400 V DC (the maximum voltage that can be applied across input pins without damage)

Dimensions/mass: approx. 106~mm (4.17 in) W \times 19.8~mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



4ch ANALOG UNI	T U8975 warm-up time and zero adjustment; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)	
Measurement functions	No. of channels: 4, for voltage measurement	
Input terminals	Isolated BNC connector (input impedance 1 $M\Omega$, input capacitance 30 pF) Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)	
Measurement range 4, 10, 20, 40, 100, 200 V f.s., 6 ranges AC voltage for possible measurement/display: 140 V rms Low-pass filter: 5/500/5 k/200 kHz		
Measurement resolution	1/32,000 of measurement range (using 16-bit A/D conversion)	
Maximum sampling rate	5 MS/s (simultaneous sampling in 4 channels)	
Measurement accuracy	±0.1% f.s. (with filter 5 Hz, zero position accuracy included)	
Frequency characteristics	DC to 2 MHz -3 dB	
Input coupling	DC/GND	
Maximum input voltage	200 V DC (the maximum voltage that can be applied across input pins without damage)	

Dimensions/mass: approx. 106~mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



4CH ANALOG UN	IT U8978	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)
Measurement functions No. of channels: 4,		r voltage measurement
Input terminals Max. rated voltage to		tor (input impedance 1 M Ω , input capacitance 30 pF), ground: 30 V AC or 60 V DC for direct input, 300 V AC, DC (CAT ith the 9665 (Between each input channel and the main unit, and between
Measurement range	100, 200, 400 mV f.s. 1, 2, 4, 10, 20, 40 V f.s., 9 ranges Low-pass filter: 5/500/5 k/200 kHz	
Measurement resolution 1/32,000 of measurement range (using 16-bit A/D conversion)		nent range (using 16-bit A/D conversion)
Maximum sampling rate	5 MS/s (simultaneous s	ampling in 4 channels)
Measurement accuracy ±0.3% f.s. (with filter		Hz, zero position accuracy included)
Frequency characteristics DC to 2 MHz -3 dB		
Input coupling DC / GND		
Maximum input voltage	40 V DC (with direct in	nput), 400 V DC (with 9665)

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 260 g (9.2 oz) Accessories: None



DIGITAL VOLTMI MR8990	ETER UNIT (Accuracy at 23 ±5°C/73 ±9°F, 80% RH after 30 minutes of warm- up time and calibration, Accuracy guaranteed for 1 year, Post- adjustment accuracy guaranteed for 1 year)
Measurement functions	No. of channels: 2, for DC voltage measurement
	Banana input connectors (Input impedance: 100 M Ω or higher with 100 mV f.s. to 10 V f.s range, otherwise 10 M Ω)
Input terminals	Max, rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels withou damage)
Measurement range	100, 1000 mV f.s. 10, 100, 1000 V f.s., 5 ranges
Measurement resolution	1/1,000,000 of measurement range (using 24-bit ΔΣ modulation A/D)
Integration time	20 ms × NPLC (during 50 Hz), 16.67 ms × NPLC (during 60 Hz)
Response time	2 ms +2 x integration time or less (rise - f.s. \rightarrow + f.s., fall + f.s. \rightarrow - f.s.)
Basic measurement accuracy	±0.01% rdg. ±0.0025% f.s. (at range of 1000 mV f.s.)
Maximum input voltage	500 V DC (the maximum voltage that can be applied across input pins without damage)

Dimensions/mass: approx. 106~mm (4.17 in) W imes 19.8 mm (0.78 in) H imes 196.5 mm (7.74 in) D, approx. 250~g (8.8 oz) Accessories: None



DIGITAL VOLTME	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80 % RH after 30 minutes of warm-up time; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)	
Measurement functions	No. of channels: 4, for DC voltage measurement	
	Isolated BNC connectors (Input impedance: 100 M Ω or higher with 1 V f.s. to 10 V f.s. range, otherwise 10 M Ω)	
Input terminals	Max. rated voltage to ground: 100 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)	
Measurement range	1, 10, 100 V f.s., 3 ranges	
Measurement resolution	$1/1,000,000$ of measurement range (using 24-bit $\Delta\Sigma$ modulation A/D)	
Integration time	20 ms × NPLC (during 50 Hz), 16.67 ms × NPLC (during 60 Hz)	
Basic measurement accuracy	±0.02% rdg. ±0.0025% f.s.	
Maximum input voltage	100 V DC (the maximum voltage that can be applied across input pins without damage)	

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



DC/RMS UNIT 8972 (Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes warm-up time and zero adjustment. Accuracy guaranteed for 1 yei Post-adjustment accuracy guaranteed for 1 yei			
Measurement functions	No. of channels: 2, for voltage measurement, DC/RMS selectable		
Input terminals	Isolated BNC connector (input impedance 1 MQ, input capacitance 30 pF) Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)		
Measurement range	100, 200, 400 mV f.s. 1, 2, 4, 10, 20, 40, 100, 200, 400 V f.s., 12 ranges AC voltage for possible measurement/display: 280 V rms Low-pass filter: 5/50/500/5 k/100 kHz		
Measurement resolution	1/2000 of measurement range (using 12-bit A/D conversion)		
Maximum sampling rate	1 MS/s (simultaneous sampling in 2 channels)		
Measurement accuracy	±0.5% f.s. (with filter 5 Hz, zero position accuracy included)		
RMS measurement	RMS accuracy: ±1% f.s. (DC, 30 Hz to 1 kHz) ±3% f.s. (1 kHz to 100 kHz) Response time: SLOW 5 s (rise time from 0 to 90% of full scale), MID 800 ms (rise time from 0 to 90% of full scale), SAST 100 ms (rise time from 0 to 90% of full scale) Crest factor: 2		
Frequency characteristics	DC to 400 kHz -3 dB (with AC coupling: 7 Hz to 400 kHz -3 dB)		
Input coupling	AC/DC/GND		
Maximum input voltage	400 V DC (the maximum voltage that can be applied across input pins without damage)		

Dimensions/mass: approx. 106~mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



HIGH RESOLUTI 8968	ON UNIT (Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment, Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, for voltage measurement		
Input terminals	Isolated BNC connector (input impedance 1 $M\Omega$, input capacitance 30 pF) Max, ratled voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)		
Measurement range	100, 200, 400 mV f.s. 1, 2, 4, 10, 20, 40, 100, 200, 400 V f.s., 12 ranges AC voltage for possible measurement/display: 280 V rms Low-pass filter: 5/50/500/5 k/50 KHz		
Anti-aliasing filter	Integrated filter for suppressing aliasing distortion caused by FFT processing (automatic cutoff frequency setting/OFF)		
Measurement resolution	1/32,000 of measurement range (using 16-bit A/D conversion)		
Maximum sampling rate	1 MS/s (simultaneous sampling in 2 channels)		
Measurement accuracy	±0.3% f.s. (with filter 5 Hz, zero position accuracy included)		
Frequency characteristics	DC to 100 kHz -3 dB (with AC coupling: 7 Hz to 100 kHz -3 dB)		
Input coupling	AC/DC/GND		
Maximum input voltage	400 V DC (the maximum voltage that can be applied across input pins without damage)		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



Accessories. Notic			
3CH CURRENT UN U8977	IIT (Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment, Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 3, Current measurement with optional current sensor		
Input terminals	Dedicated connector terminal (ME15W) (input impedance 1 MΩ, common GND with recorder)		
Compatible current sensors	9272-05, CT6841-05, CT6843-05, CT6844-05, CT6845-05, CT6846-05, CT6862-05, CT6863-05, 9709-05, CT6904, CT6865-05, CT6875, CT6876 (Direct connection) CT7631, CT7636, CT7642, CT7731, CT7736, CT7742, CT7044, CT7045, CT7046 (Connection using optional CONVERSION CABLE CT9920)		
Measurement range	- Directly connected current sensor: Automatically identify rating of compatible current sensors Using 9272-05 (20 A), CT6841-05: 2 A to 100 A f.s., 6 ranges Using CT6862-05: 4 A to 200 A f.s., 6 ranges Using 272-05 (200 A), CT6843-05, CT6863-05: 20 A to 1000 A f.s., 6 ranges Using 9272-05 (200 A), CT6843-05, C7690-05, CT6904, CT6875: 40 A to 2000 A f.s., 6 ranges Using CT6844-05, CT6845-05, 9709-05, CT6904, CT6875: 40 A to 2000 A f.s., 6 ranges Using CT6846-05, CT6865-05, CT6876: 80 A to 4000 A f.s., 6 ranges - Current sensors connected using CT9920: Select conversion rate or model Using CT7631, CT7731: 200 A, 1 range Using CT7636, CT7736: 200 A to 1000 A, 3 ranges Using CT7642, CT7742: 2000 A/4000 A, 2 ranges Using CT7044, CT7045, CT7046: 2000 A to 10,000 A, 3 ranges		
Measurement accuracy (with 5 Hz filter ON) Note: Add the accuracy and attributes of the current sensor being used.	±0.3% f.s. Frequency characteristics: DC to 2 MHz ±3 dB		
Measurement resolution	1/32,000 of measurement range (using 16-bit A/D conversion)		
Maximum sampling rate	5 MS/s (simultaneous sampling in 3 channels)		
Other functions	Input coupling: DC/GND, Low-pass filter: 5/500/5 k/200 kHz		
	·		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: CONVERSION CABLE 9318 \times 2 (To connect the current sensor to the 8971)




(To connect the current sensor to the corr)		
CURRENT UNIT 8	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment, Accuracy guaranteed for 1 year, Postadjustment accuracy guaranteed for 1 year)	
Measurement functions	No. of channels: 2, Current measurement with optional current sensor	
Input terminals	Sensor connector (input impedance 1 M Ω , exclusive connector for current sensor via the CONVERSION CABLE 9318, common GND with recorder)	
Compatible current sensors	CT6862, CT6863, 9709, CT6865, CT6841, CT6843, CT6844, CT6845, CT6846, 9272-10 (To connect to the 8971 via the CONVERSION CABLE 9318)	
Measurement range	Using 9272-10 (20 A), CT6841: 2 A to 100 A f.s., 6 ranges Using CT6862: 4 A to 200 A f.s., 6 ranges Using 9272-10 (200 A), CT6843, CT6863: 20 A to 1000 A f.s., 6 ranges Using CT6844, CT6845, 9709, CT6846*1, CT6865*1: 40 A to 2000 A f.s., 6 ranges *1: The conversion ratio needs to be set to 2 for scaling.	
Measurement accuracy (with 5 Hz filter ON) Note: Add the accuracy and attributes of the current sensor being used.	±0.65% f.s. RMS accuracy: ±1% f.s. (DC, 30 Hz to 1 kHz), ±3% f.s. (1 kHz to 10 kHz) RMS response time: 100 ms (rise time from 0 to 90% of full scale) Crest factor: 2 Frequency characteristics: DC to 100 kHz ±3 dB (with AC coupling: 7 Hz to 100 kHz)	
Measurement resolution	1/2000 of measurement range (using 12-bit A/D conversion)	
Maximum sampling rate	1 MS/s (simultaneous sampling in 2 channels)	
Other functions	Input coupling: AC/DC/GND, Low-pass filter: 5/50/500/5 k/50 kHz	

Dimensions/mass: approx. 106 mm (4.17 in) W × 19.8 mm (0.78 in) H × 196.5 mm (7.74 in) D, approx. 230 g (8.1 oz)



HIGH-VOLTAGE UNIT U8974		(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)	
Measurement functions	No. of channels: 2, for voltage measurement, DC/RMS selectable Max. rated voltage to ground: 1000 V AC, DC for measurement category III, 600 V AC, DC for measurement category IV		
Input terminals	Banana input terminal (Input impedance: 4 MΩ, Input capacitance: 5 pF)		
Measurement range	4, 10, 20, 40, 100, 200, 400, 1000 V fs. (DC mode), 8 ranges 10, 20, 40, 100, 200, 400, 1000 V fs. (RMS mode), 7 ranges Low-pass filter: 5/50/5005 K/50 KHz		
Measurement resolution	1/32,000 of measurement range (using 16-bit A/D conversion)		
Maximum sampling rate	1 MS/s		
Measurement accuracy	±0.25% f.s. (with filter 5 Hz, zero position accuracy included)		
RMS measurement	RMS accuracy: ±1.5% f.s. (DC, 30 Hz to 1 kHz), ±3% f.s. (1 kHz to 100 kHz) Response time: High speed 150 ms, medium speed 500 ms, low speed 2.5 s		
Frequency characteristics	DC to 100 kHz -3 dB		
Input coupling	DC/GND		
Maximum input voltage	1000 V DC, 700 V AC		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 245 g (8.6 oz) Accessories: CONVERSION CABLE L9769 \times 2 (Cable length: 60 cm)

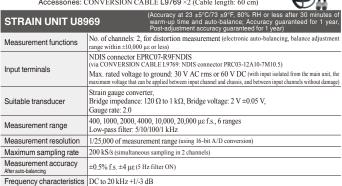

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 204.5 mm (8.05 in) D, approx. 240 g (8.5 oz) Accessories: Ferrite clamp \times 2



TEMP UNIT 8967	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm- up time and zero adjustment; Accuracy guaranteed for 1 year, Post- adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, for temperature measurement with thermocouple (voltage measurement not available)		
Input terminals	Thermocouple input: Push-button terminal block, Recommended wire diameter: single-wire 0.14 to 1.5 mm², braided wire 0.14 to 1.0 mm² (conductor wire diameter op.18 mm or more), AWG 26 to 16 Input impedance: min. 5 MΩ (with line fault detection ON/OFF) Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)		
Temperature measurement range Note: Upper and lower limit values depend on the thermocouple	200°C (392°F) f.s. (-100°C to 200°C (-148°F to 392°F)), 1000°C (1832°F) f.s. (-200°C to 1000°C (-328°F to 1832°F)), 2000°C (3632°F) f.s. (-200°C to 2000°C (-328°F to 3632°F)), 3 ranges Measurement resolution: 1/20,000 of measurement range (using 16-bit A/D conversion)		
Thermocouple range (JIS C 1602-1995) (ASTM E-988-96)	K: -200°C to 1350°C (-328°F to 2462°F), R: 0°C to 1700°C (32°F to 3092°F), F: -200°C to 1100°C (-328°F to 2012°F), S: 0°C to 1700°C (32°F to 3092°F), E: -200°C to 800°C (-328°F to 1472°F), B: 400°C to 1800°C (752°F to 3272°F), W (WRe5-26): 0°C to 2000°C (32°F to 3632°F) N: -200°C to 1300°C (-328°F to 2372°F),		
	Reference junction compensation: internal/external (switchable), line fault detection ON/OFF possible		
Data refresh rate	3 methods, Fast: 1.2 ms (digital filter OFF), Normal: 100 ms (digital filter 50/60 Hz), Slow: 500 ms (digital filter 10 Hz)		
Measurement accuracy	Thermocouple K, J, E, T, N: $\pm 0.1\%$ f.s. $\pm 1^{\circ}$ C ($\pm 1.8^{\circ}$ F), ($\pm 0.1\%$ f.s. $\pm 2^{\circ}$ C ($\pm 3.6^{\circ}$ F) at -200° C to 0° C (-238° F to 32° F)) Thermocouple R, S, B, W: $\pm 0.1\%$ f.s. $\pm 3.5^{\circ}$ C ($\pm 6.3^{\circ}$ F) (at 0° C (32° F) to less than 400° C (752° F) (32° F) or accuracy guarantee at less than 400° C (752° F) for B), $\pm 0.1\%$ f.s. $\pm 3^{\circ}$ C ($\pm 5.4^{\circ}$ F) (at 400° C (752° F) or more)		
	Reference junction compensation [RJC] accuracy: ±1.5°C (±2.7°F) (added to measurement accuracy with internal reference junction compensation)		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



FREQ UNIT 8970	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80 % RH after 30 minutes of warm- up time; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, for voltage input based frequency measurement, rotation, power frequency, integration, pulse duty ratio, pulse width		
Input terminals	Isolated BNC connector (input impedance 1 MΩ, input capacitance 30 pF). Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)		
Frequency mode	Measurement range: Between DC to 100 kHz (minimum pulse width 2 µs), 20 Hz to 100 kHz f.s., 8 ranges Accuracy: ±0.1% f.s. (exclude 100 kHz range), ±0.7% f.s. (100 kHz range)		
Rotation mode	Measurement range: Between 0 to 2 million rotations/minute (minimum pulse width 2μs), 2 kr/min to 2 Mr/min f.s, 7 ranges Accuracy: ±0.1% f.s. (exclude 2 Mr/min range), ±0.7% f.s. (2 Mr/min range)		
Power frequency mode	Measurement range: 50 Hz (40 to 60 Hz), 60 Hz (50 to 70 Hz), 400 Hz (390 to 410 Hz), 3 ranges Accuracy: ±0.03 Hz (50, 60 Hz), ±0.1 Hz (400 Hz range)		
Integration mode	Measurement range: 40 k-counts f.s. to 20 M-counts f.s. 6 ranges Accuracy: ±0.0025% f.s.		
Duty ratio mode	Measurement range: Between 10 Hz to 100 kHz (minimum pulse width 2 μs), 100% f.s. Accuracy: ±1% (10 Hz to 10 kHz), ±4% (10 kHz to 100 kHz)		
Pulse width mode	Measurement range: Between 2 μs to 2 s, 10 ms to 2 s f.s. Accuracy: ±0.1% f.s.		
Measurement resolution	0.0025% f.s. (integration mode), 0.01% f.s. (exclude integration, power frequency mode), 0.01 Hz (power frequency mode)		
Input voltage range and threshold level	$\pm 10V$ to $\pm 400V, 6$ ranges, selectable threshold level at each range		
Other functions	Slope, Level, Hold, Smoothing, Low-pass filter, Switchable DC/AC input coupling, Frequency dividing, Integration over-range keep/return		

Dimensions/mass: approx. 106~mm (4.17 in) W imes 19.8 mm (0.78 in) H imes 196.5 mm (7.74 in) D, approx. 190 g (6.7 oz) Accessories: None



LOGIC UNIT 8973	
Measurement functions	No. of channels: 16 channels (4 ch/1 probe connector × 4 connectors)
	Mini DIN connector (for HIOKI logic probes only) Compatible logic probes: 9320-01, 9327, MR9321-01

Dimensions/mass: approx. 106~mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 230 g (8.1 oz) Accessories: None



CHARGE UNIT U897	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment, Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, for acceleration measurement		
Input terminals	Voltage input / pre-amp embedded input: Metal BNC connector (Under voltage input: input impedance 1 MQ, input capacitance 200 pF or less) Charge input: Miniature connector (#10-32UNF) Max. rated voltage to ground: 30 V AC or 60 V DC (with input isolated from the main unit, the maximum voltage that can be applied between input channel and chassis, and between input channels without damage) *Voltage input terminal (GND and charge input terminal GND for the same channel are shared.		
Suitable transducer	Charge output type acceleration detector Pre-amp embedded acceleration detector		
Measurement range Charge input (Miniature connector) Pre-amp embedded input (BNC connector)	I (m/s²) to 200 k (m/s²) f.s., 12 ranges x 6 types Charge input sensitivity: 0.1 to 10 pC /(m/s²) Pre-amp embedded sensor input sensitivity: 0.1 to 10 mV /(m/s²) Amplitude accuracy: ±2% f.s. Frequency characteristics: I(1.5) to 50 kHz -3 dB (charge input) Low-pass filter: 500/s kHz Pre-amp supply power: 3.5 mA ±20%. 22 V ±5% Maximum input charge: ±500 pC (6 ranges on high sensitivity side), 50.000 pC (6 ranges on low sensitivity side)		
Measurement range Voltage input (BNC connector)	10 mV to 40 V f.s., 12 ranges, DC amplitude accuracy: ±0.5% f.s. Frequency characteristics: DC to 50 kHz -3 dB (with DC coupling), 1 Hz to 50 kHz -3 dB (with AC coupling) Low-pass filter: 5/500/5 kHz, input coupling: AC/DC/GND Maximum input voltage: 40 V DC		
Measurement resolution	1/25,000 of measurement range (using 16-bit A/D conversion)		
Maximum sampling rate	200 kS/s		
Anti-aliasing filter	Integrated filter for suppressing aliasing distortion caused by FFT processing (automatic cutoff frequency setting/OFF)		
TEDS	IEEE 1451.1.4 class 1 support (Support for sensor information reading and automatic sensitivity setting)		

Dimensions/mass: approx. 106~mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 230~g (8.1 oz) Accessories: None



WAVEFORM GEN MR8790	ERATOR UNIT	(Accuracy at 23 ±5°C/73 ±9°F, 80% RH after 30 minutes of warm-up time; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)
Output terminal	No. of channels: 4, SMB terminal (Output impedance: 1 Ω or less) Max. rated voltage to ground: 33 V rms AC or 70 V DC	
Output voltage range	-10 V to 10 V (Amplitude setting range: 0 V to 20 V p-p, Setting resolution: 1 mV)	
Max. output current	5 mA	
Output function	DC, Sine wave (Output frequency range: 0 Hz to 20 kHz)	
Accuracy	Amplitude accuracy: ±0.25% of setting ±2 mV p-p (1 Hz to 10 kHz) Offset accuracy: ±3 mV DC output accuracy: ±0.6 mV	
Other	Self-test function (Voltage, Current)	

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 230 g (8.1 oz) Accessories: None




PULSE GENERA	TOR UNIT MR8791	(Accuracy at 23 ±5°C/73 ±9°F, 80% RH or less with no condensation; accuracy guaranteed for 1 year)
Output terminal	No. of channels: 8, Connector: SCSI-2, half pitch, 50-pin Max. rated voltage to ground: 33 vrms AC or 70 V DC (between unit and output channels) Logic output/Open collector output	
Output mode 1	Pattern output: Read frequency: 0 Hz to 120 kHz, 2048 logic patterns	
Output mode 1	Pulse output: Frequency 0 Hz to 20 kHz, Duty 0.1% to 99.9%	
Output mode 2	Logic output: Output voltage l (H level: 3.8 V or more, L level: 0.	
	Open collector output: Absolu Overcurrent protection: 100 m	te maximum rated voltage for collector/emitter 50 V
Other	Self-test function	

Dimensions/mass: approx. 106~mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 280 g (9.9 oz) Accessories: None



VIR GENERATOR	UNIT U8794	(Accuracy at 23 ±5°C/73 ±9°F, 80% RH or less with no condensation; accuracy guaranteed for 1 year)	
Output terminal	No. of channels: 8 (each channel is isolated), Connector: 25-pin D-sub Max. rated voltage to ground: 25 V		
Output items	DC voltage, DC current, resistance (simulated output)		
	DC voltage: -0.100 0 V to +5.2	300 0 V (setting resolution: 0.1 mV)	
Output range	1 mA range: -1.000 00 mA to 250 μ A range: -250. 00 μ A to	5.000 0 mA, Setting resolution: 0.1 μA +1.000 00 mA, Setting resolution: 0.01 μA +250.00 μA, Setting resolution: 0.01 μA 50.000 μA, Setting resolution: 0.001 μA tting resolution: 6 digits	
Output accuracy	DC voltage: 5 V range, ±0.035	5% of setting \pm 800 μ V	
	DC current: 5 mA range: ±0.050% of setti 1 mA range: ±0.050% of setti 250 μA range: ±0.050% of set 50 μA range: ±0.050% of setti	$ng \pm 800$ nA ting ± 200 nA	
Other	Self diagnostic, switch output	terminals, estimate target connection, cancel offset	

System Chart of Options

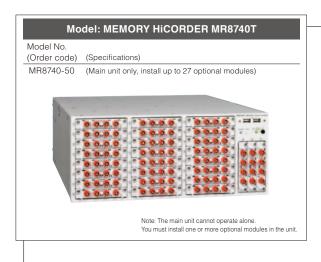

Storage media

'Use only the storage media sold by HIOKI. Compatibility and performance are not quaranteed for storage media made by other manufacturers. You may be read from or save data to such media

SLC flash memory



USB DRIVE Z4006 16 GB Using highly durable and reliable

PC Software (free)



Waveform Viewer Wv

Software for checking waveforms with binary data on a PC, saving data in CSV format, and transferring to spreadsheet programs

Operating environment Windows 10/8/7 (32/64-bit) Functions:

- Simple display of waveform files
 Convert binary data files to text format, CSV, etc.
- Scroll function, enlarge/reduce display, jump to cursor/trigger position, etc.



WAVE PROCESSOR 9335

PC display for massive amounts of waveform data and more

Logic signal measurement



LOGIC PROBE 9327 4-channel type, for voltage/contact signal ON/ OFF detection (response pulse width 100 ns or more, miniature terminal type)



LOGIC PROBE MR9321-01 4 isolated channels, ON/OFF detection of AC/ DC voltage (miniature terminal type)



LOGIC PROBE 9320-01 4-channel type, for voltage/contact signal ON/ OFF detection (response pulse width 500 ns or more, miniature terminal type)



CONNECTION CABLE L9795-01



CONNECTION CABLE L9795-02

Max. rated voltage to ground 33 V AC rms or 70 V DC SMB terminal - BNC terminal Cable length: 1.5 m (4.92 ft)

Input modules

Input cords not included. Please purchase them separately. When using the 9709 with CURRENT UNIT 8971, up to a total of



ANALOG UNIT 8966 2 ch, voltage input, 20 MS/s, (DC to 5 MHz)



4ch ANALOG UNIT U8975

4 ch, voltage input, 5 MS/s, (DC to 2 MHz)



4CH ANALOG UNIT U8978

4 ch, voltage input, 5 MS/s, (DC to 2 MHz), highest sensitivity range 100 mV f.s.



HIGH RESOLUTION UNIT 8968 2 ch, voltage input, 1 MS/s (DC to 100 kHz)



DC/RMS UNIT 8972

2 ch, voltage/1 MS/s, (DC to 400 kHz) RMS rectifier (DC, 30 to 100 kHz) HIGH-VOLTAGE UNIT U8974



2 ch, voltage input, max. 1000 V DC and 700 V AC



DIGITAL VOLTMETER UNIT MR8990 2 ch, high-precision DC voltage, 0.1 µV resolution, maximum sampling rate 500 times/s

DIGITAL VOLTMETER UNIT U8991



4 ch, high-precision DC voltage, 1 µV resolution,

maximum sampling rate 50 times/s



CURRENT UNIT 8971

2 ch, for measuring current using dedicated current sensors, 2 CONVERSION CABLES 9318 included, for use with up to 4 units



3CH CURRENT UNIT U8977

3 ch, for measuring current using dedicated current sensors, can be directly connected to ME15W (12-pin) connector-type sensors, for use with up to 3 units



TEMP UNIT 8967



STRAIN UNIT U8969

2 ch, strain gauge type converter amp



CONVERSION CABLE L9769

(for STRAIN UNIT U8969 only, included) FREQ UNIT 8970



CHARGE UNIT U8979 2 ch, for acceleration measurement, supports charge output, pre-amp output, and voltage output

2 ch. for measurement of frequency, RPM, pulse, etc.



LOGIC UNIT 8973

4 terminals, 16 ch, up to 3 units (slots 25 to 27 only)

Output modules

* Output cords not included. Please purchase them separately * Configure settings with communication commands.



WAVEFORM GENERATOR UNIT MR8790 4ch, DC output ±10 V, Sine wave output 1 Hz to 20 kHz



PULSE GENERATOR UNIT MR8791



8ch, Pulse output 0.1 Hz to 20 kHz, Pattern output



VIR GENERATOR UNIT U8794

8ch, DC voltage output, DC current output, resistance output (simulated resistance)

SCI Monitor 4.0





HSCI-4.0-SENT



CAN monitors, LIN monitors, and SENT monitors that are the same size as the MR8740T unit can be purchased from Nihon System Eight Co., Ltd. Power is supplied to a monitor when it is installed on the MR8740T. Note that it will not be possible to record or analyze the data with the MR8740T or HIOKI software. Please contact Nihon System Eight for additional information. http://nse-inc.co.jp/

Por details, see product information on Hioki's website.

* Voltage is limited to the specifications of the **INPUT CORD (A)** CONNECTION CORD L9790

Flexible φ 4.1 mm (0.16 in) thin cable allowing for up to 600 V ir 1.8 m (5.91 ft) length * The end clip is sold separately.

ALLIGATOR CLIP L9790-01 Red/black set attaches to the ends of the cables L9790

GRABBER CLIP 9790-02

* When this clip is attached to the end of the L9790, input is limited to CAT II 300 V. Red/black set.

CONTACT PIN 9790-03

Red/black set attaches to the ends of the cables L9790

Voltage is limited to the specifications of th input modules in use. INPUT CORD (B)

CONNECTION CORD L9198 φ 5.0 mm (0.20 in) dia., cable allowing for up to 300 V input, 1.7 m (5.58 ft) length, small alligator clip

CONNECTION CORD L9197

 ϕ 5.0 mm (0.20 in) dia., cable allowing for up to 600 V input, 1.8 m (5.91 ft) length, detachable large alligator clips are bundled

GRABBER CLIP 9243

Attaches to the tip of the L9197, red/black set, full length: 196 mm (7.72 in)

Voltage is limited to the specifications of th INPUT CORD (C)



input modules in use. 10:1 PROBE 9665

Max. rated voltage to ground is same as for input module, max. input voltage 1 kV rms (up to 500 kHz), 1.5 m (4.92 ft) length

100:1 PROBE 9666

Max. rated voltage to ground is same as for input module, max. input voltage 5 kV peak (up to 1 MHz), 1.5 m (4.92 ft) length

INPUT CORD (D)

Voltage to ground is within this product's specifications. *Separate power source is also



DIFFERENTIAL PROBE P9000-01 (Wave Only) For Memory HiCorder, 1 kV AC, DC, Frequency band: 100 kHz

DIFFERENTIAL PROBE P9000-02 (Switch between Wave/RMS) For Memory HiCorder, 1 kV AC, DC, Frequency band: 100 kHz

AC ADAPTER Z1008 100 to 240 V AC

Voltage to ground is within this product's specifications. *Separate power source is also INPUT CORD (E)

DIFFERENTIAL PROBE 9322 AC, 2 kV DC, Frequency bands

AC ADAPTER 9418-15

INPUT CORD (F)

CONNECTION CABLE L4940 Banana plug - banana plug, Cord length 1.5 m (4.92 ft)

EXTENSION CABLE L4931 Extend the length of banana plug cables, Cable length: 1.5 m (4.92 ft)

ALLIGATOR CLIP L4935 Attach to the tip of banana plug cables, CAT IV 600 V, CAT III 1000 V

BUS BAR CLIP L4936 Attach to the tip of banana plug cables, CAT III 600 V

MAGNETIC ADAPTER L4937 Attach to the tip of banana plug cables, CAT III 1000 V

GRABBER CLIP 9243

Attach to the tip of banana plug cables, red/black set, full length: 196 mm (7.72 in), CAT III 1000 V

* For the MR8990 *Voltage is limited to the specifications of the input modules in use. INPUT CORD (G)



TEST LEAD L2200

Cable length: 70 cm, tips interchangeable with a pin test lead or alligator clip, maximum input voltage: CAT IV 600 V, CAT III 1000 V

High-precision current measurement *ME15W (12-pin) terminal type *Directly connect to U8977

High-precision pull-through current sensors, observe waveforms from DC to distorted AC

AC/DC CURRENT SENSOR CT6862-05, 1 MHz, 50 A AC/DC CURRENT SENSOR CT6863-05, 500 kHz, 200 A Observe waveforms from DC to distorted AC AC/DC CURRENT PROBE CT6841-05, 1 MHz, 20 A AC/DC CURRENT PROBE CT6843-05, 500 kHz, 200 A

CI AMP ON SENSOR 9272-05, 100 kHz, 200 A

High-precision pull-through current sensors, observe waveforms from DC to distorted AC AC/DC CURRENT SENSOR CT6875, 2 MHz, 500 A

AC/DC CURRENT SENSOR CT6876, 1.5 MHz, 1000 A Observe waveforms from DC to distorted AC AC/DC CURRENT PROBE CT6844-05, 200 kHz, 500 A AC/DC CURRENT PROBE CT6845-05, 100 kHz, 500 A AC/DC CURRENT PROBE CT6846-05, 20 kHz, 1000 A

Precautions when connecting the CURRENT UNIT 8971 with a high-precision current sensor

 High-precision current sensor (ME15W) + CT9901 + 9318 → CURRENT UNIT 8971 High-precision current sensor (ME15W) + CT955x + BNC cable → ex CURRENT UNIT 8971

CURRENT UNIT 8971 High-precision current sensor (PL23) + 9318 — CURRENT UNIT 8971 High-precision current sensor (PL23) + CT9900 + CT955x + BNC cable CURRENT UNIT 8971

The 9318 is bundled with the CURRENT UNIT 8971

bine the high-precision current sensor and the power supply 55) to perform current measurements with a voltage input unit. ensors with ME15W (12-pin) terminals (-05 type) can be connec

The separately available CONVERSION CABLE CT9900 is required in orde to use a sensor with a PL23 (10-pin) terminal.

POWER SUPPLY for Sensors SENSOR UNIT CT9555 1 ch, with waveform output

CONNECTION CORD L9217 Both cord ends are isolated BNC, 1.6 m (5.25 ft)

PL23 (10-pin) - ME15W (12-pin) conversio

CONVERSION CABLE CT9900 Convert PL23 (10-pin) terminal to ME15W (12-pin) terminal

y available CONVERSION CABLE CT9901 is required in high-precision current sensor equipped with a ME15W all (-05 type) with the CURRENT UNIT 8971. 55x is not required in order to use a sensor equipped with n) terminal with the 8971, the CONVERSION CABLE 9318 with the 8971) is required for that setup.

ME15W (12-pin) - PL23 (10-pin) conversion

CONVERSION CABLE CT9901 Convert ME15W (12-pin) terminal to PL23 (10-pin) terminal

Other current sensor types

General-purpose current measurement *PL14 terminal type

AC/DC AUTO 7FRO CURRENT SENSOR CT 7731

AC/DC AUTO ZERO CURRENT SENSOR CT7736

AC/DC AUTO ZERO CURRENT SENSOR CT7742 DC, 1 Hz to 5 kHz, 2000 A

AC/DC CURRENT SENSOR CT7631

AC/DC CURRENT SENSOR CT7636

AC/DC CURRENT SENSOR CT7642

AC FLEXIBLE CURRENT SENSOR CT7044

AC FLEXIBLE CURRENT SENSOR CT7045

AC FLEXIBLE CURRENT SENSOR CT7046 254 mm (10.00 in), 6000 A

eparately available CONVERSION CABLE CT9920 is red in order to connect a PL14 terminal general-purpose nt sensor to the CURRENT UNIT U8977.

Leak Current *For commercial power lines, 50/60 Hz CLAMP ON LEAK HITESTER 3283

OUTPUT CORD L9095

AC ADAPTER 9445-02 100 to 240 V AC, 9 V/ 1 A

10 mA range / 10 µA resolution to 200 A range, with monitor / analog output 1 V f.s.

Connect to BNC terminal, 1.5 m (4.92 ft) length

CONVERSION CABLE CT9920 Convert PL14 terminal to ME15W (12-pin)

PL14 - ME15W (12-pin) conversion

The MEMORY HICORDER can be used with various types of current sensors and probes

DC, 1 Hz to 5 kHz, 100 A

DC, 1 Hz to 5 kHz, 600 A

DC, 1 Hz to 10 kHz, 100 A

DC. 1 Hz to 10 kHz. 600 A

DC, 1 Hz to 10 kHz, 2000 A

100 mm (3.94 in), 6000 A

180 mm (7.09 in), 6000 A

U8977 only

10 mA class to 500 A (High speed)



CLAMP ON PROBE 3273-50 Frequency characteristics: DC to 50 MHz wideband response, 10 mA-class up to 30 A rms

CLAMP ON PROBE 3276

Frequency characteristics: DC to 100 MHz wideband response, 10 mA-class up to 30 A rms

CLAMP ON PROBE 3274 Frequency characteristics: DC to 10 MHz wideband response, up to 150 A rms

CLAMP ON PROBE 3275

Frequency characteristics: DC to 2 MHz wideband response, up to 500 A rms

Custom cable For P9000. Inquire with your local Hioki distributor.

(1) Bus powered USB cable (2) USB(A)- Micro B cable

(3) 3-prong cable

Non-contact voltage measuring



NON-CONTACT AC VOLTAGE PROBE SP3000-01 5 V rms rated, 10 Hz to 100 kHz band width



NON-CONTACT AC VOLTAGE PROBE SP3000 Sold individually




AC VOLTAGE PROBE SP9001

Sold individually

Other options for input



CONNECTION CORD L9217 Cord has insulated BNC connectors at both ends, signal output use, 1.6 m (5.25 ft) length

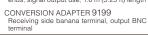

Temperature sensor THERMOCOUPLE



For reference only. Please purchase locally.

Precautions for connecting current sensors and current probes *Depending on the combination of current sensors

and current probes, physical and space limitations may prevent simultaneous connection. Hioki can assist with special order conversion cables please inquire with your local distributor.

*A total of 9 current sensors and current probes can be connected simultaneously to the Memory HiCorder. (Total with the CURRENT UNIT U8977, CURRENT UNIT 8971, and PROBE POWER UNIT Z5021 connected)

*Three U8977 current units and four 8971 current units can be simultaneously connected to the Memory

*Only the U8977 can use the CT9920 to convert a PL14 connector sensor. The 8971 does not support this combination.

INPUT CORD (H)



CONNECTION CORD 9166 BNC - clip, Cord length: 1.5m (4.92 ft)

The MR8740T supports your testing technologies with simultaneously sampled measurements across multiple channels.







Set examples

Multi-channel measurement for ECU development

In addition to the measurement of 68 analog channels + 24 logic channels, the MR8740T can also generate waveforms on 4 channels, generate pulses on 8 channels, and output DC voltage/DC current/ simulated resistance on 40 channels. This allows the simultaneous testing of multiple points, such as for high-performance boards, with a single unit.

MEMORY HICORDER	MR8740-50	1 unit
4ch ANALOG UNIT	U8975	17
CONNECTION CORD	L9790	68
ALLIGATOR CLIP	L9790-01	68
WAVEFORM GENERATOR UNIT	MR8790	1
CONNECTION CABLE	L9795-01	4
PULSE GENERATOR UNIT	MR8791	1
VIR GENERATOR UNIT	U8794	5
LOGIC UNIT	8973	3
LOGIC PROBE	9327	3

Support for a wide range of multi-channel measurements

High speed, isolation, and high precision are achieved even with multi-channel measurement.

High-speed isolated recording across 108 channels at 5 MS/s

MEMORY HICORDER	MR8740-50	1 unit
4ch ANALOG UNIT	U8975	27
CONNECTION CORD	L9790	108
ALLIGATOR CLIP	L9790-01	108

High-precision voltage measurements across 108 channels at a sampling rate of 50 times/s

MEMORY HICORDER	MR8740-50	1 unit
DIGITAL VOLTMETER UNIT	U8991	27
CONNECTION CORD	L9790	108
ALLIGATOR CLIP	L9790-01	108

Multi-channel strain measurements across 54 channels with a strain gauge converter

MEMORY HICORDER	MR8740-50	1 unit
STRAIN UNIT	U8969	27
CONVERSION CABLE	L9769	54

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies.

DISTRIBUTED BY



HEADQUARTERS

81 Koizumi. Ueda, Nagano 386-1192 Japan https://www.hioki.com/



Scan for all regional contact information